

Convenience Net Package Installation (Instruction ID: 26499829)

Installation Instruction Part Number

26499829

Kit Contents

Convenience Net Package Installation


Description	QTY
Convenience Net	1
Instruction Sheet	1
T-Shaped Anchor	2

Recommended Tools


- Gloves
- Utility Knife

Procedure

© 2026 General Motors. All rights reserved.

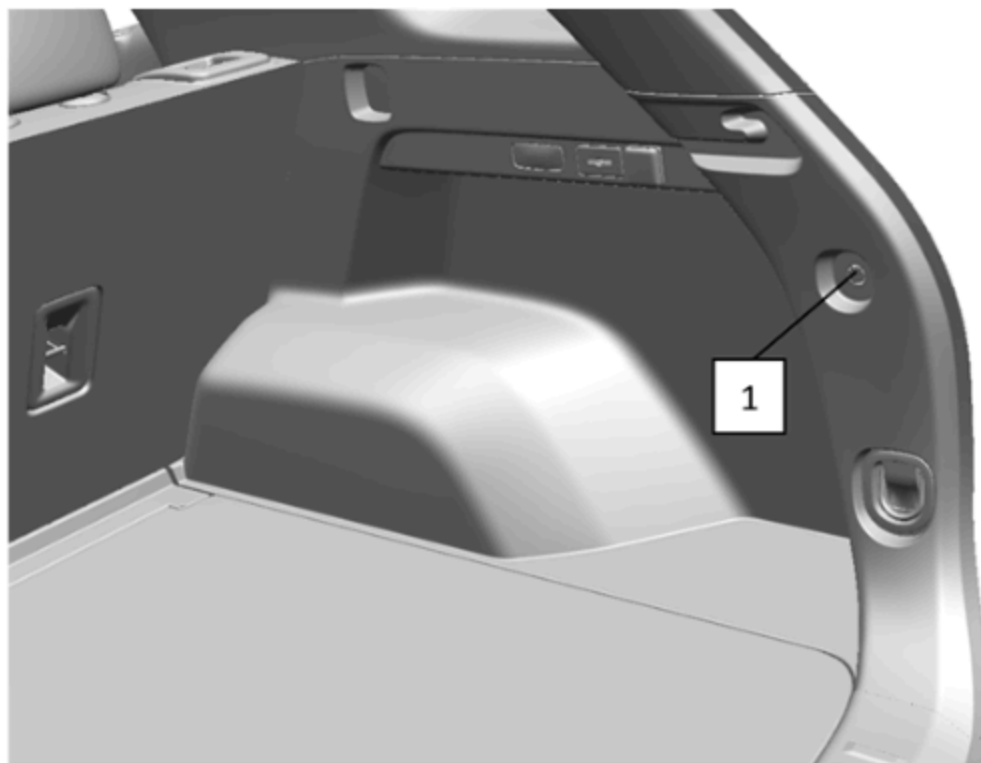


1. To install T-Shaped Anchor, locate the upper trim plug (1) indicated on the passenger side of the vehicle. Remove trim plug by using utility knife and discard.

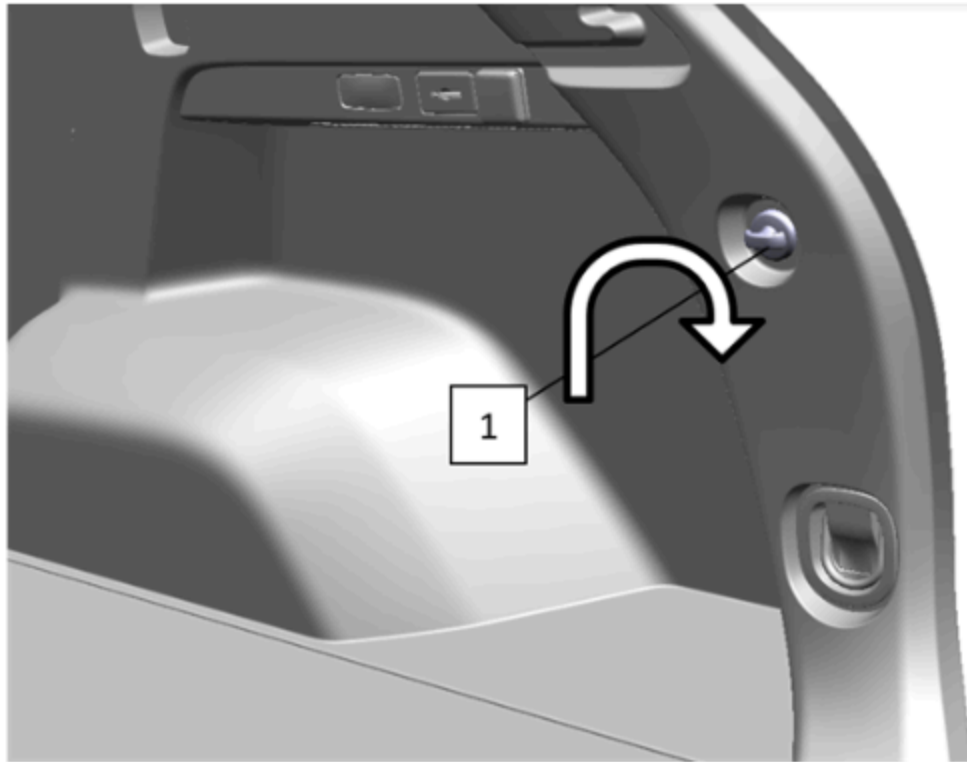

© 2026 General Motors. All rights reserved.


2. Install T-Anchor Retainer (1) into the weld nut as indicated, and turn until hand tight.
3. Repeat steps 1-2 on driver side of the vehicle.

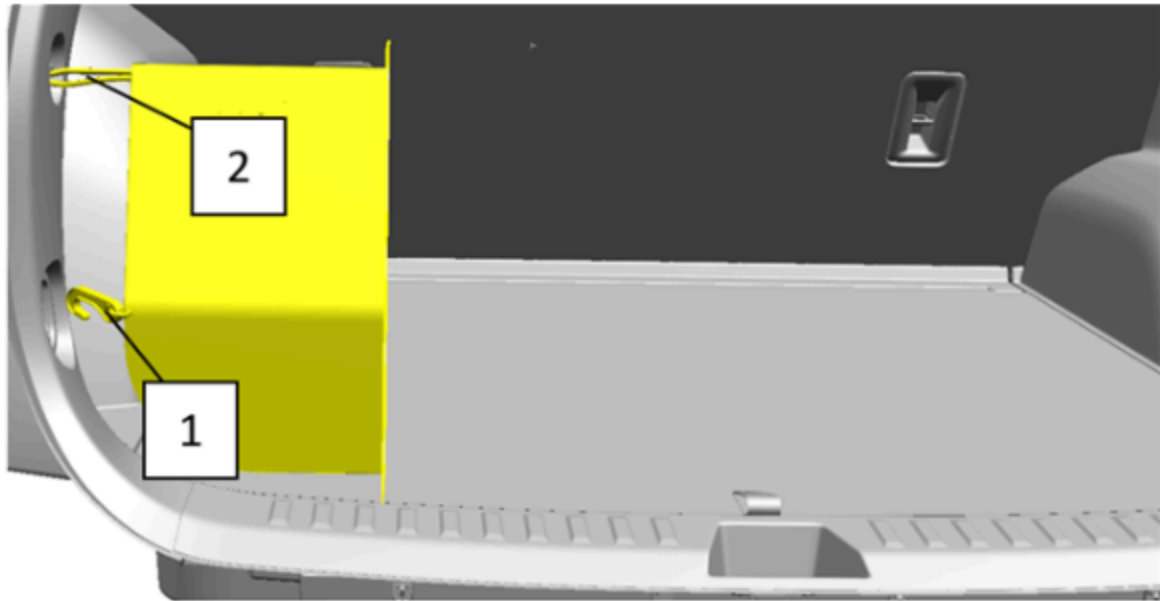

© 2026 General Motors. All rights reserved.



4. To install the convenience net, attach the plastic hooks (1) to the driver side D-rings and the elastic band (2) to the T-Shape retainers with the closed zipper in the down position.

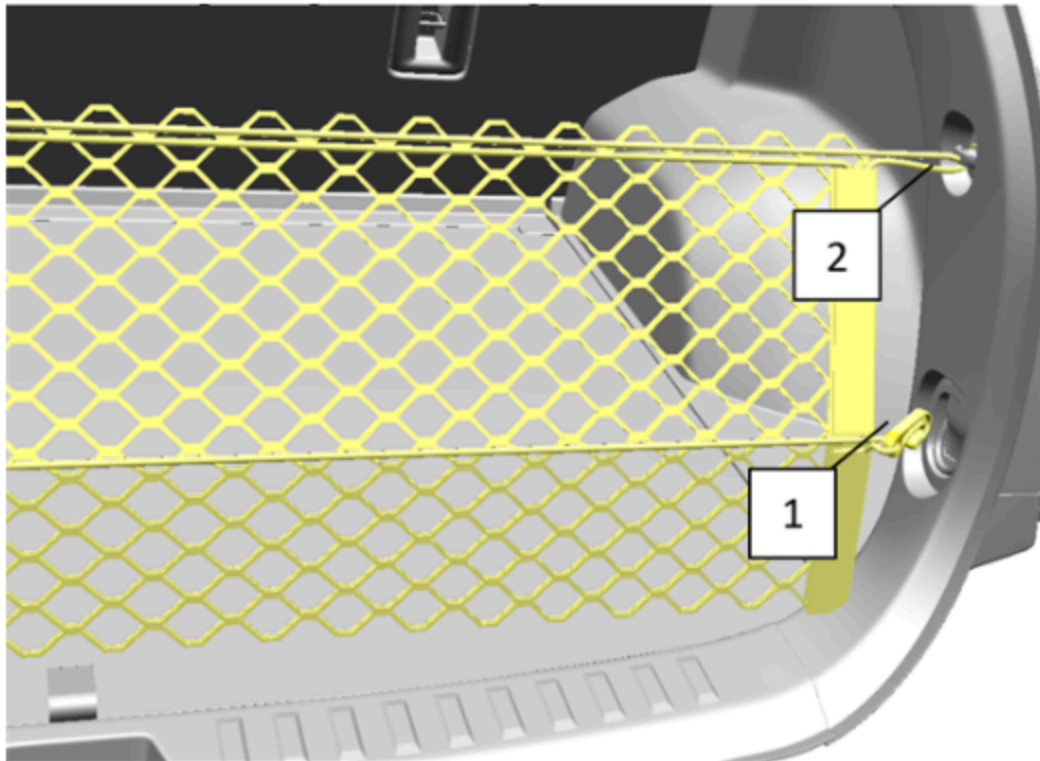

5. Unzip the pouch and unravel the convenience net.

6. Attach the other plastic hook to the passenger side D-rings and the elastic band on the T-Shape retainer.
7. To store the convenience net, roll the net neatly up into the pouch, zip the pouch closed and keep it attached to the driver side D-rings.