


Load Floor Mat Package Installation

Installation Instructions Part Number


22750985

Kit Contents

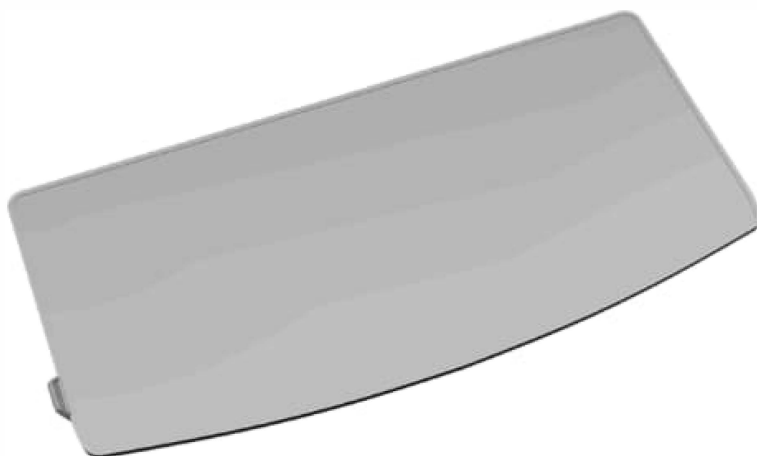


© 2025 General Motors. All rights reserved.

Procedure

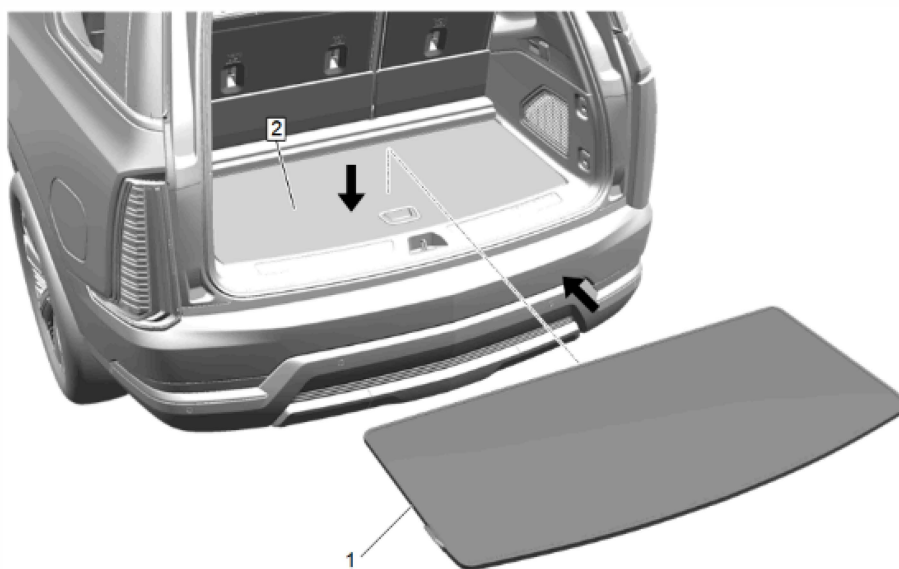

1. Install the load floor mat (1) to the rear compartment load floor (2).



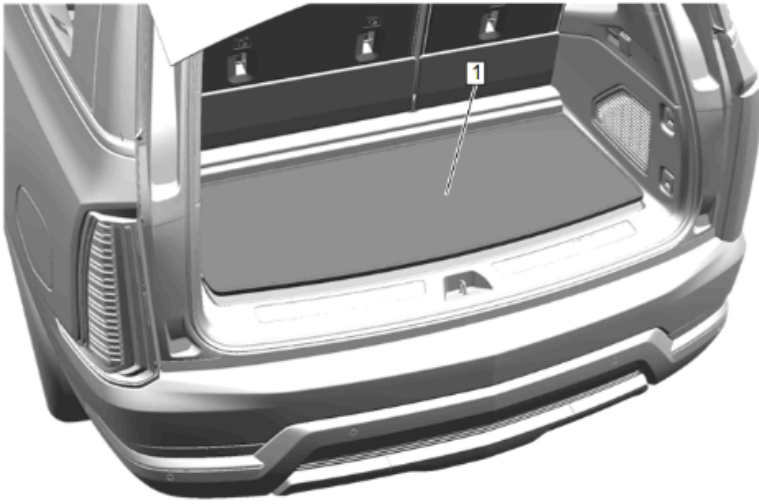

2. Load floor mat (1) installation complete.