

Front Side Door Trim Package Installation

Installation Instructions Part Number

23216655

Kit Contents

Qty	Description
1	Front Door Applique (LH)
1	Front Door Applique (RH)
1	Installation Instructions


Tools Required

- Plastic Trim Release tool
- Phillips Screwdriver


Procedure

Front Door Applique


1. Remove the front door trim panel. Refer to Vehicle Service Manual.

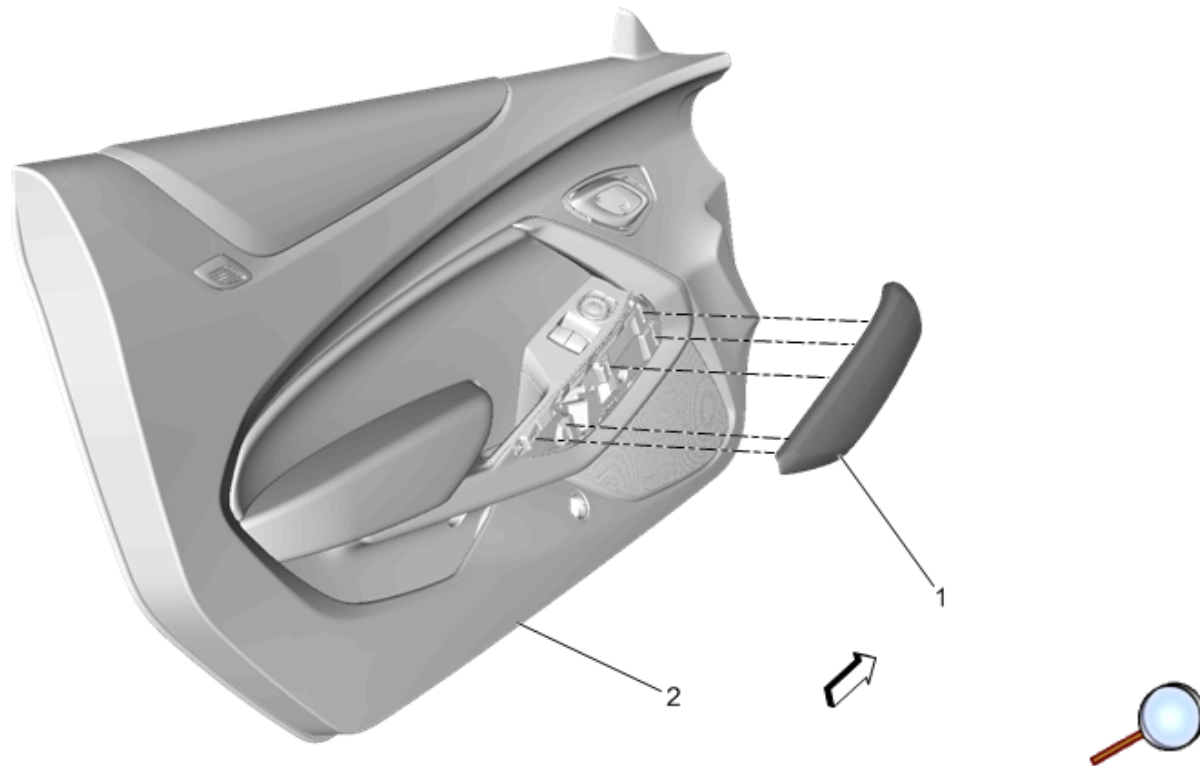


2. Using a flat-bladed plastic trim tool, release the retaining clips and remove the knee pad (1) from the front door trim panel (2).

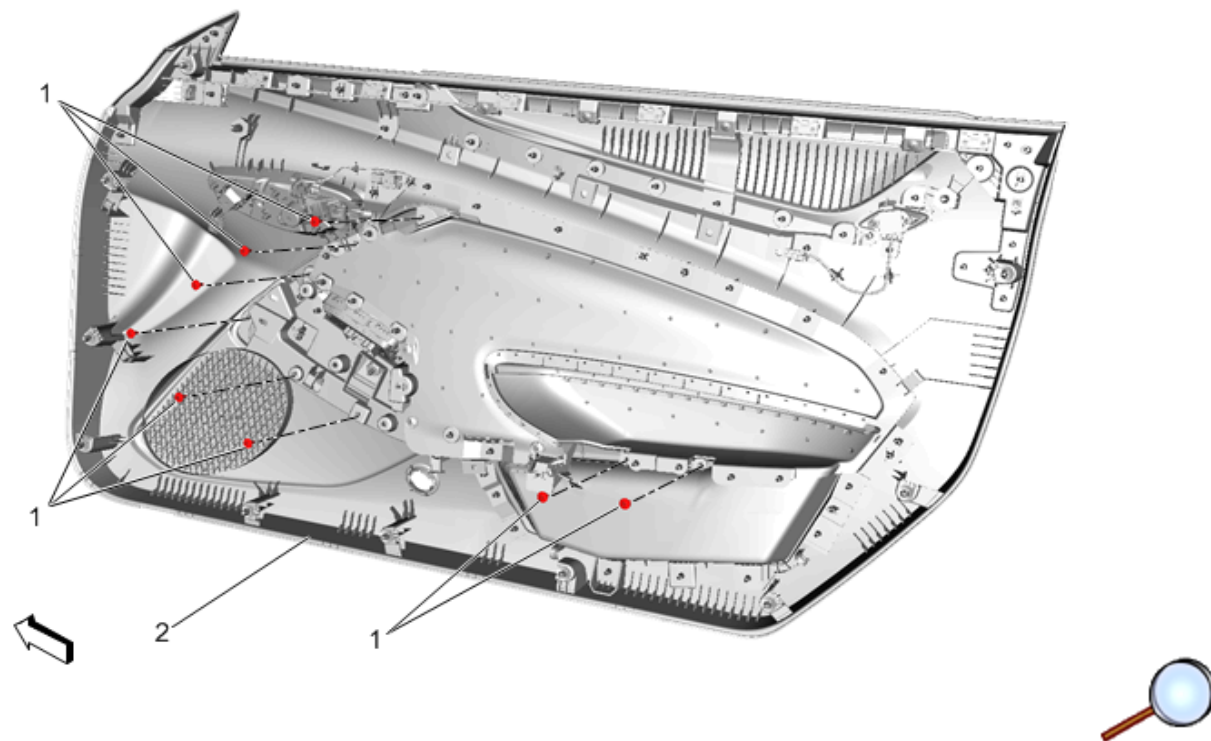


3. On the back side of the front door trim panel (2) remove and retain the screws (1) securing the front door applique.

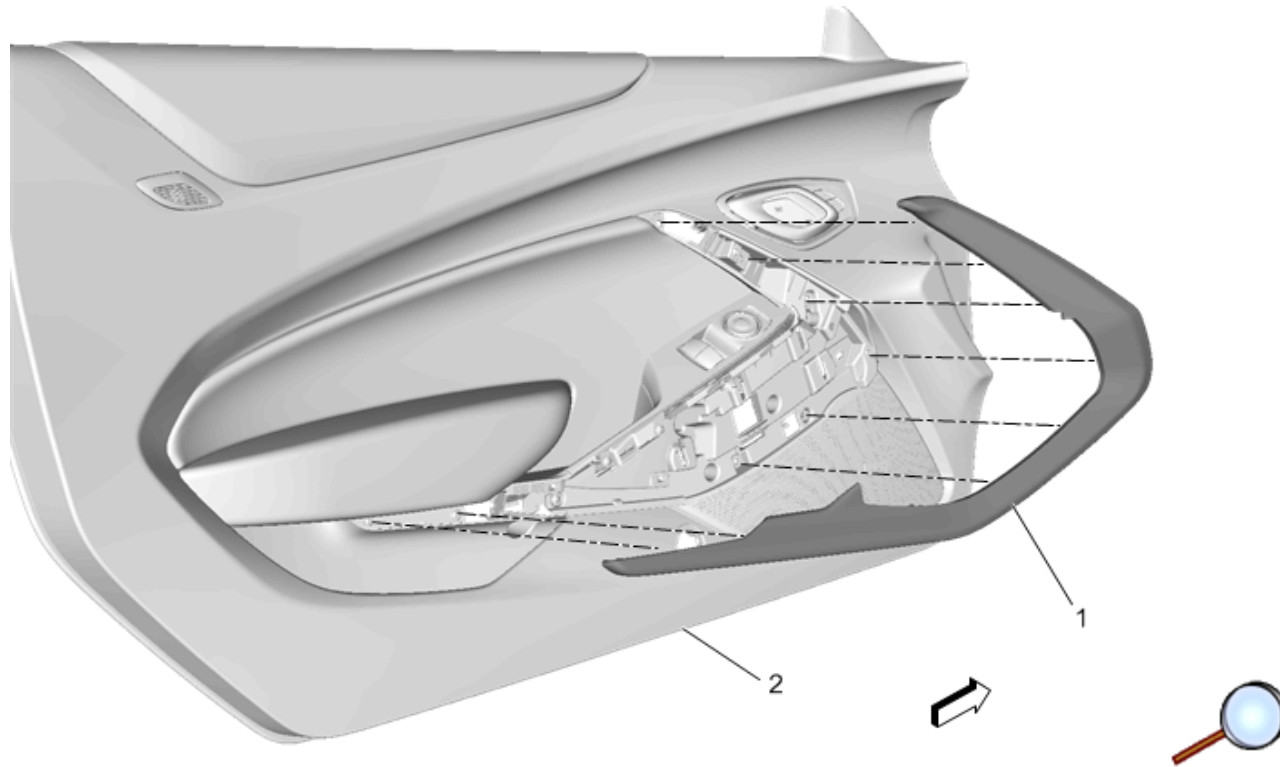


4. Using a flat-bladed plastic trim tool, release the retaining clips and remove the front door applique (1) from the front door trim panel (2).

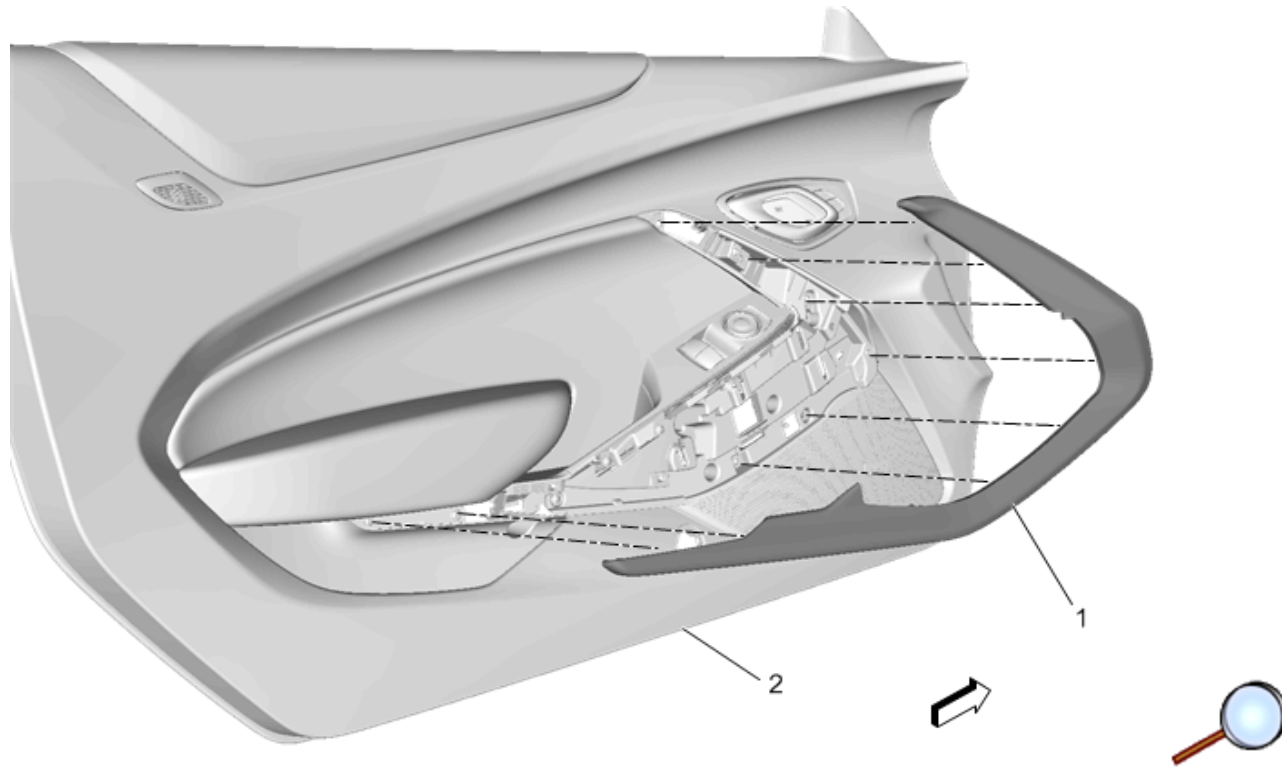

5. Position the new front door applique (1) to the front door trim panel (2) engaging the retaining clips.

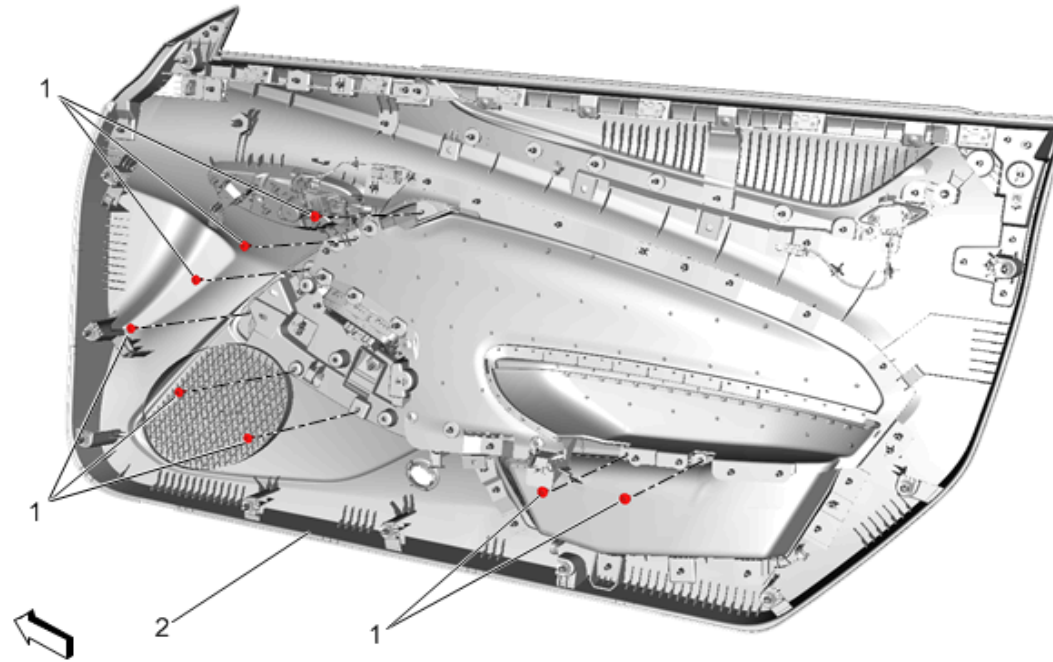

6. On the back side of the front door trim panel (2) install the retained screws (1) to the front door applique.

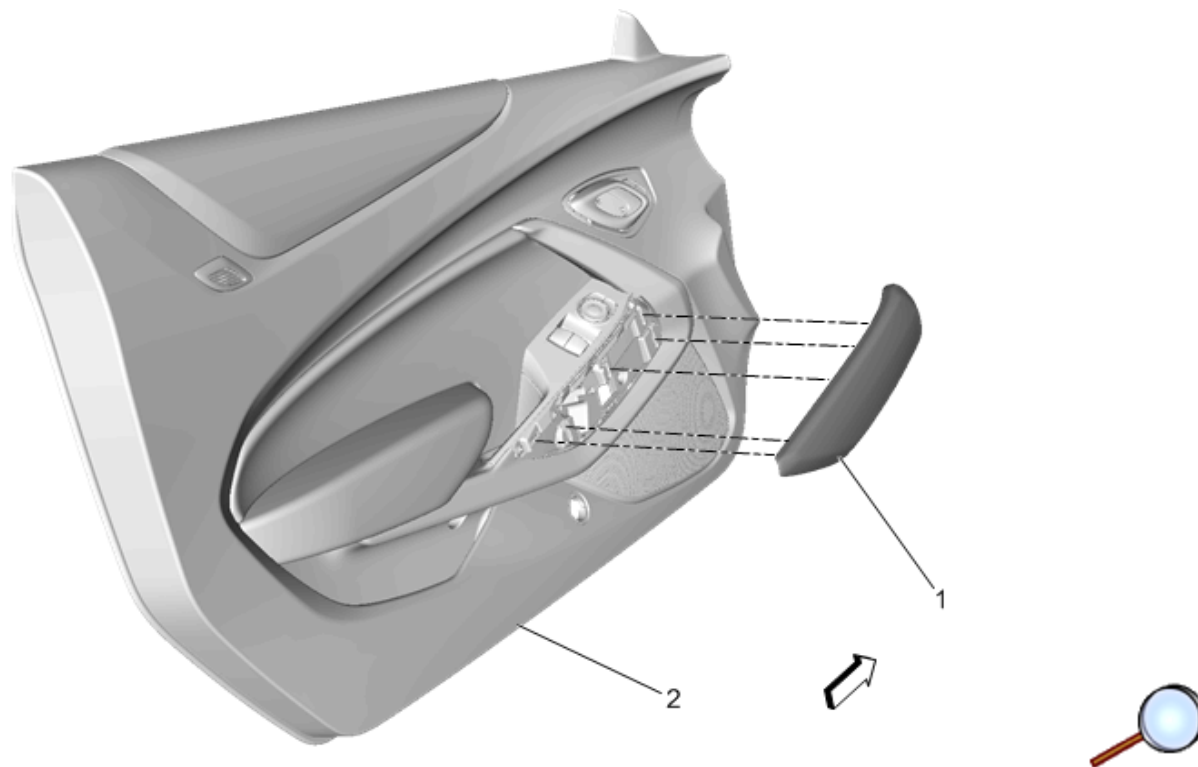

7. Install the knee pad (1) to the front door trim panel (2) engaging the retaining clips.
8. Install the front door trim panel.
9. Repeat procedure for opposite side.