

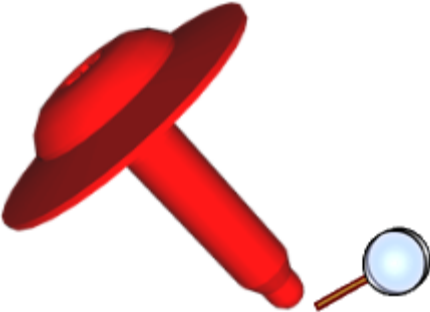
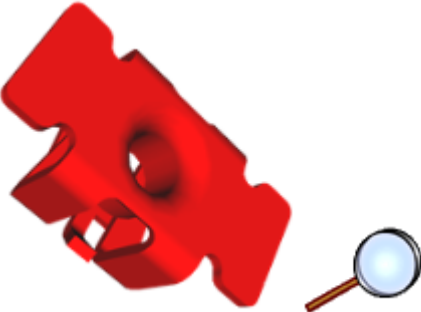
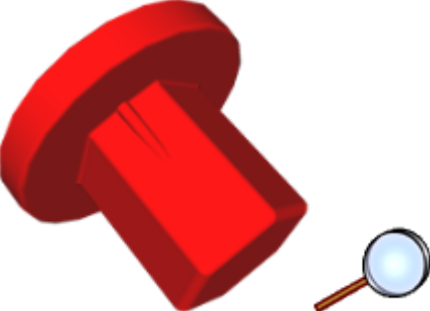
Rear Wheelhouse Panel Liner Package Installation (Instruction ID: 84263803)

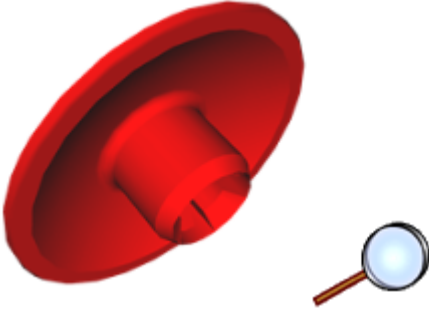
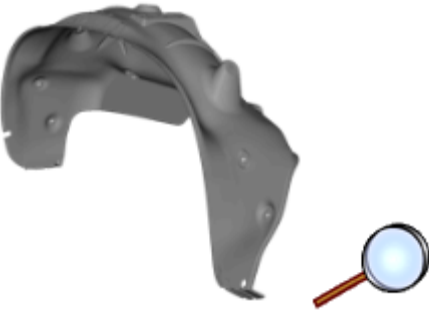
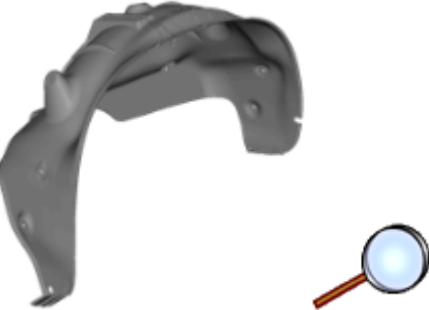
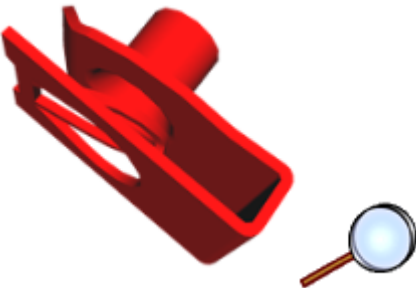
Installation Instructions Part Number

84263803

Unpack contents of box and take inventory.

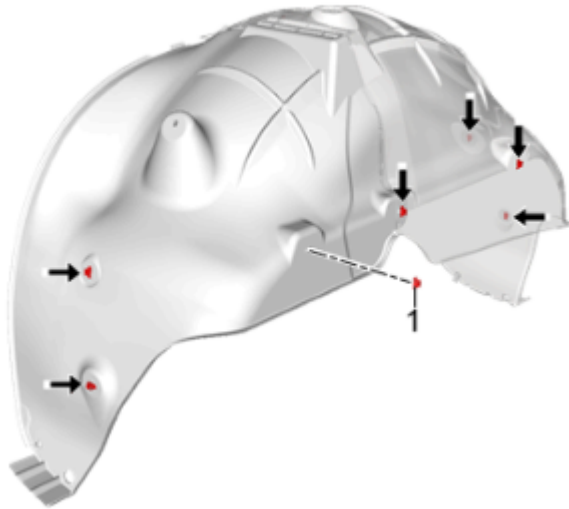
Kit Contents

Description	Qty:
Bolt 	14
Nut 	14
Threaded Plastic Nut 	4
Retainer	2

Description	Qty:
	
LH Wheel Liner 	1
RH Wheel Liner 	1
U Clip (Loose Hardware for GMC, part of liner assembly for Chevy) 	4
Installation Instructions	1

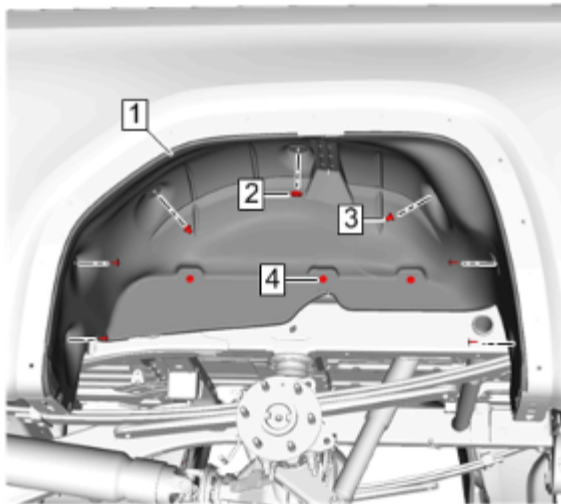
© 2024 General Motors. All rights reserved.

Procedure



Caution: Use the correct fastener in the correct location. Replacement fasteners must be the correct part number for that application. Do not use paints, lubricants, or corrosion inhibitors on fasteners, or fastener joint surfaces, unless specified. These coatings affect fastener torque and joint clamping force and may damage the fastener. Use the correct tightening sequence and specifications when installing fasteners in order to avoid damage to parts and systems. When using fasteners that are threaded directly into plastic, use extreme care not to strip the mating plastic part(s). Use hand tools only, and do not use any kind of impact or power tools. Fastener should be hand tightened, fully seated, and not stripped.

1. Insert the nuts (1) into the backside of the wheel house liner.



2. Fit the wheel house liner (1) to the vehicle and install the retainer (2).
3. Install the two plastic threaded nuts (3).
4. Install the seven bolts (4).
5. Repeat procedure for other side.