


Rear Compartment Floor Stowage Compartment Package Installation

[Installation Instructions Part Number](#)


85557386

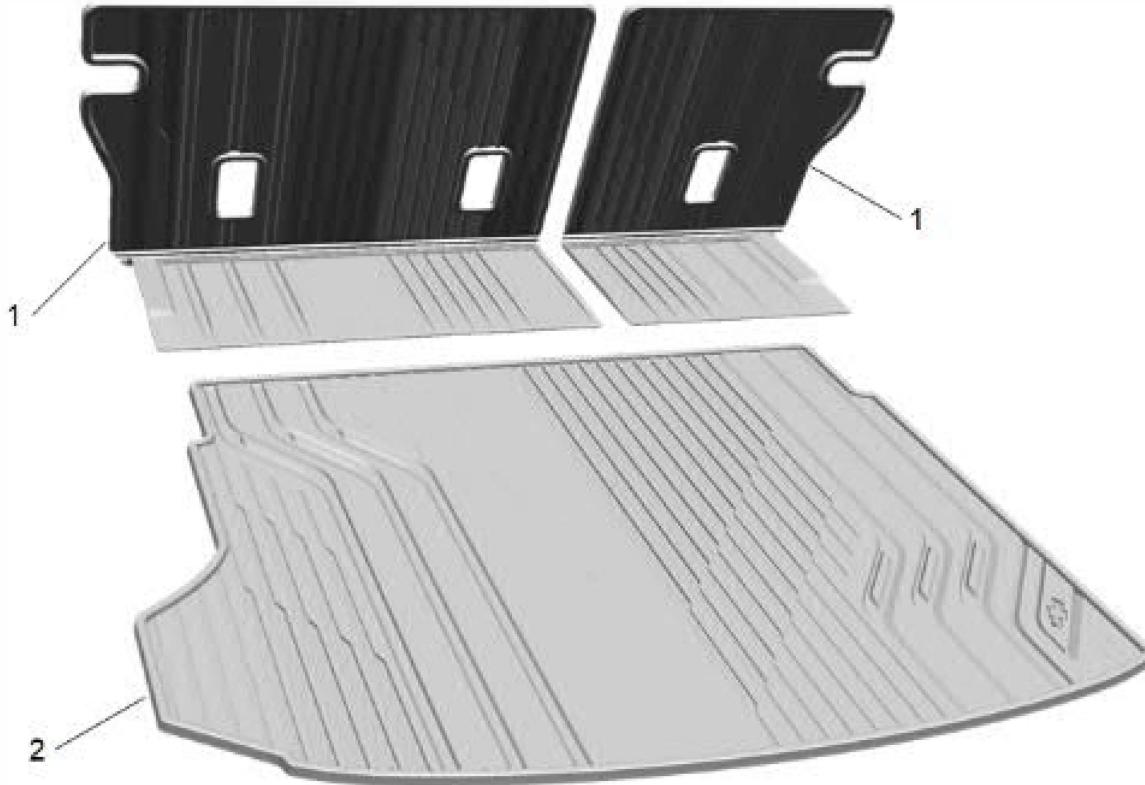

Kit Contents

Item	Qty	Description
1	1	Rear Seat Back Cargo Tray
2	1	Rear Compartment Cargo Floor Tray
-	1	Installation Instructions

Procedure
Seat Back Installation

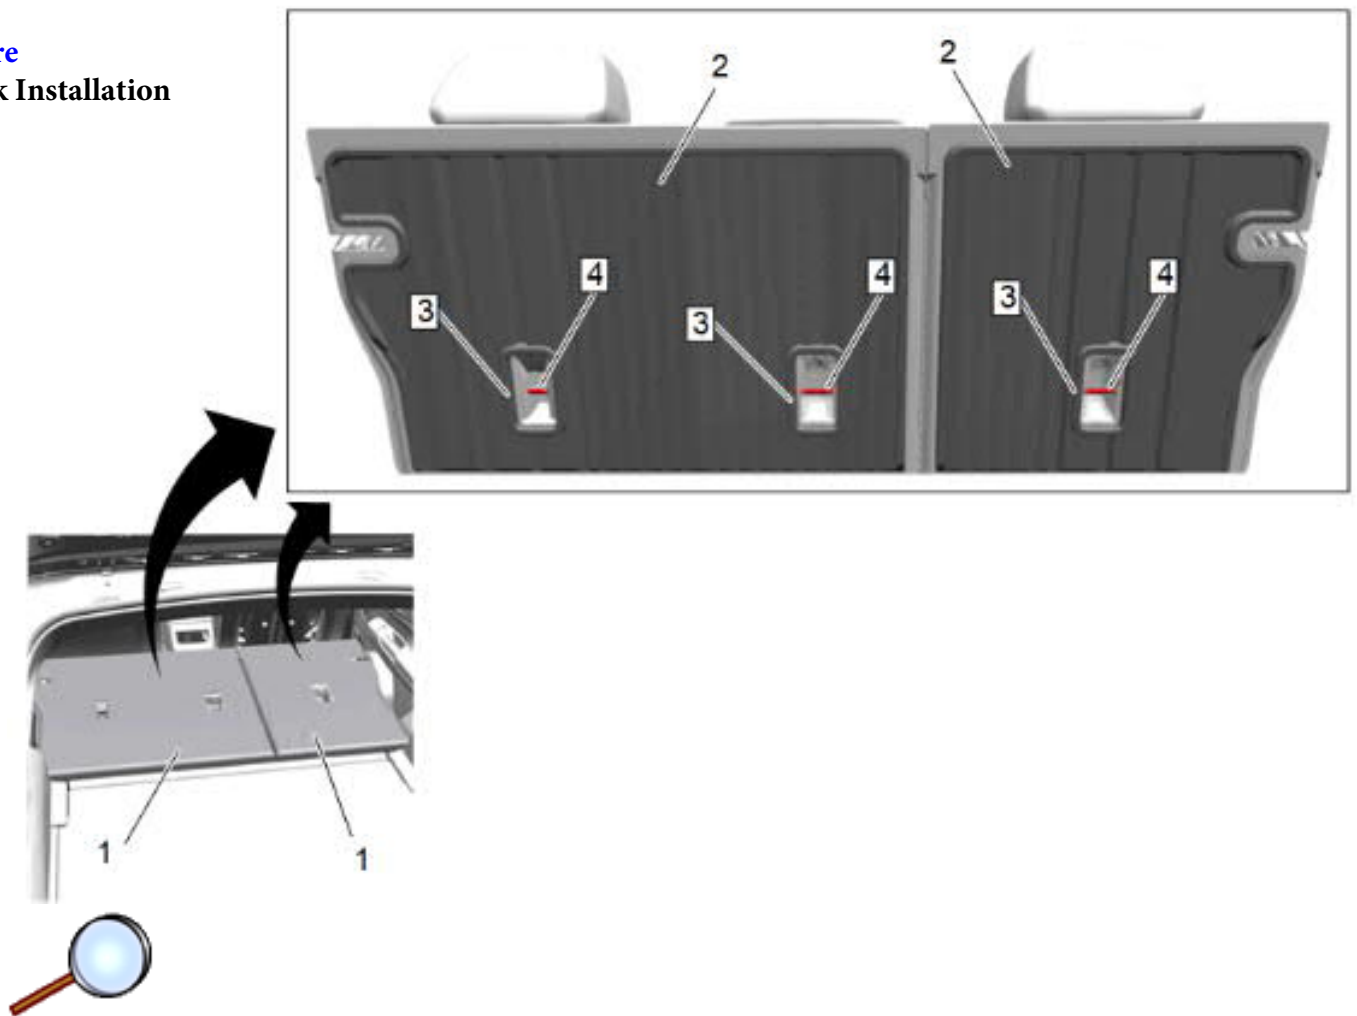


Note: Once the seats are folded in the down position, carpet needs to be vacuumed and a lint brush should be ran across the carpet to remove dirt or debris that can impact the Velcro retention or the Velcro adhesive adapter pads to the cargo floor.

1. Ensure the rear seats (1) are in the down position.
2. Install the seat back cargo trays (2) aligning the tether openings (3) to the seat tether anchors (4), and tether logo as shown.
3. Apply firm pressure at each hook & loop pad location to secure cargo trays to the seat back.

Note: If installed hook & loop pads are not compatible with vehicle carpet locate adhesive adapter pads within included attachment package and follow 'ADHESIVE ADAPTER PAD INSTALLATION ' below.

4. Return rear seats to the upright position.


Load Floor Installation

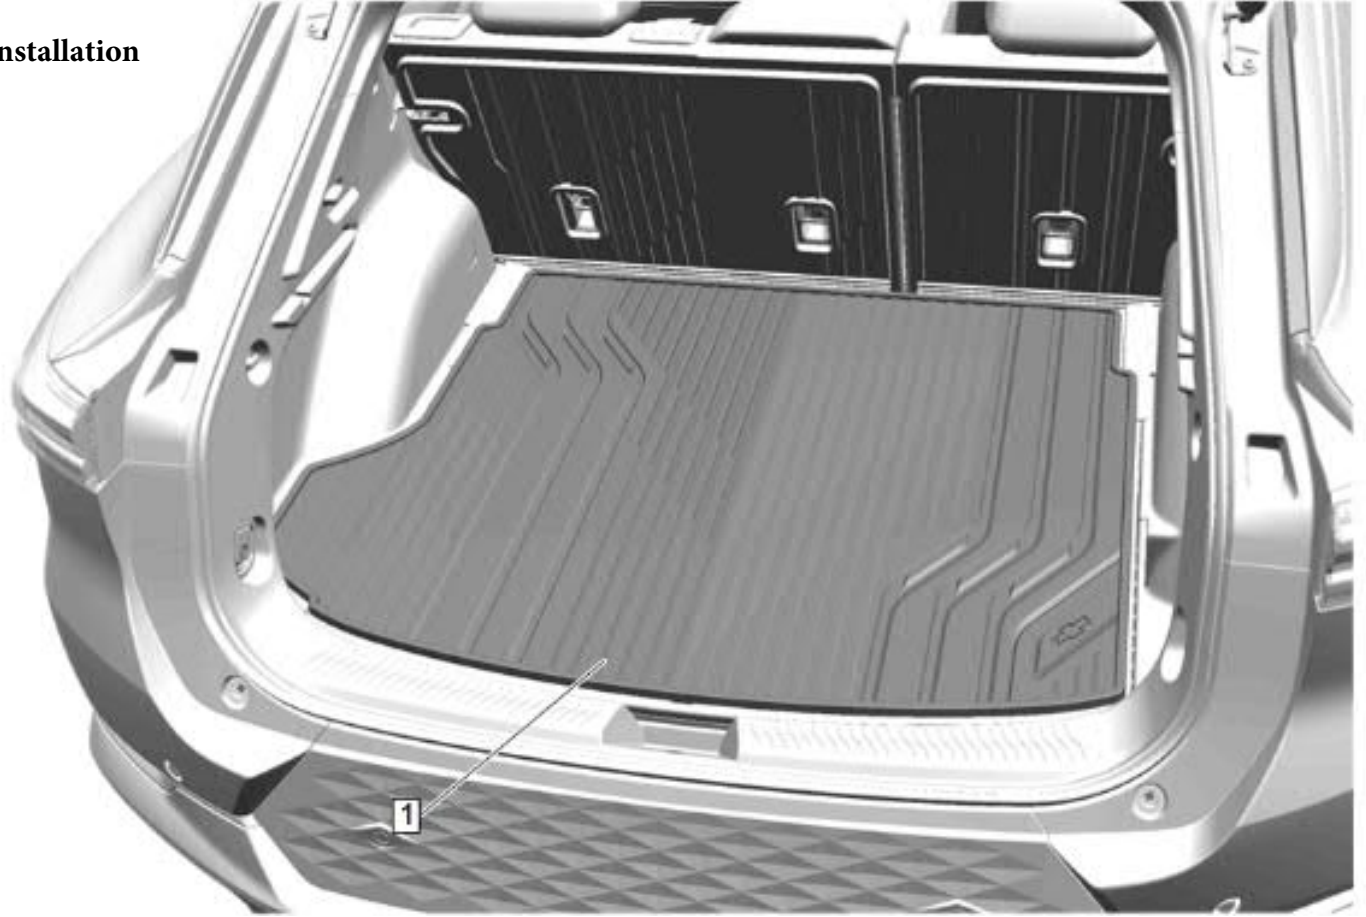

1. Install the rear cargo floor tray (1) aligning edge with the cargo sill plate.
2. Apply firm pressure at each hook & loop pad location to secure to the load floor.


Note: If installed hook & loop pads are not compatible with vehicle carpet locate adhesive adapter pads within included attachment package and follow 'ADHESIVE ADAPTER PAD INSTALLATION' below.

ADHESIVE ADAPTER PAD INSTALLATION

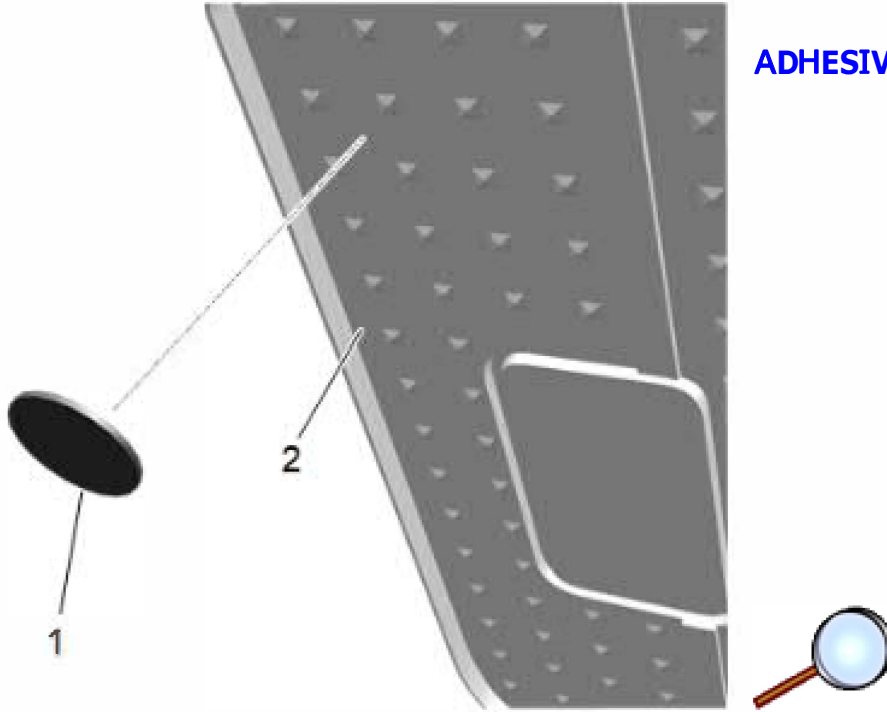


Note: Hook and loop pad quantities vary on application.

1. Remove existing hook & loop pads (1) from seat back or load floor cargo tray (2)

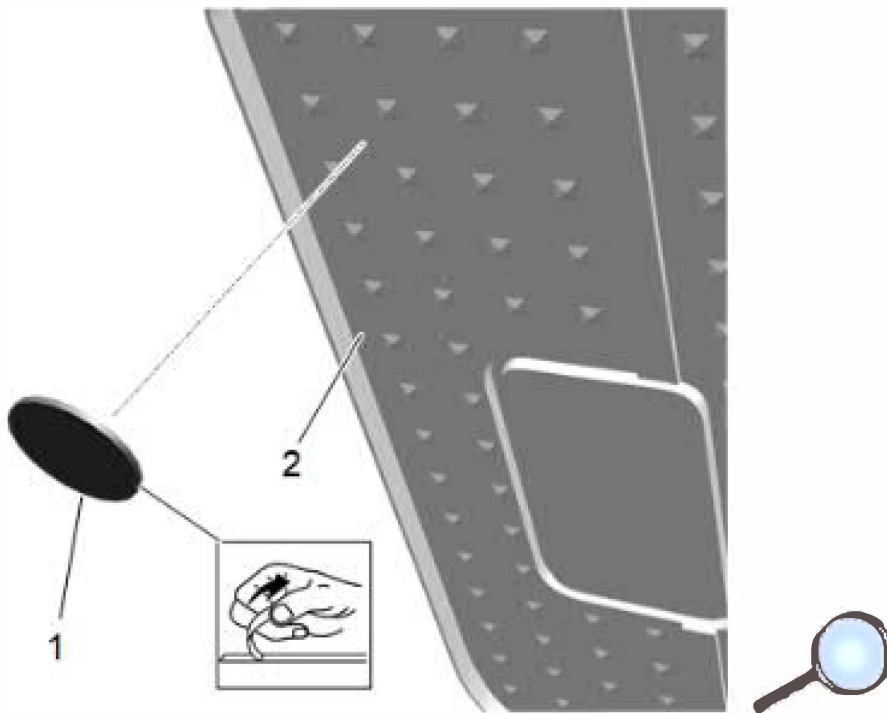

Note: Hook and loop pad quantities vary on application.

2. Install new adhesive adapter pads (1) to seat back or load floor cargo tray (2) and remove the backing paper from adhesive adapter pads.
3. Install the seat back or load floor cargo tray pieces as per vehicle application above.
4. Apply firm pressure at each hook & loop pad location to secure cargo trays.

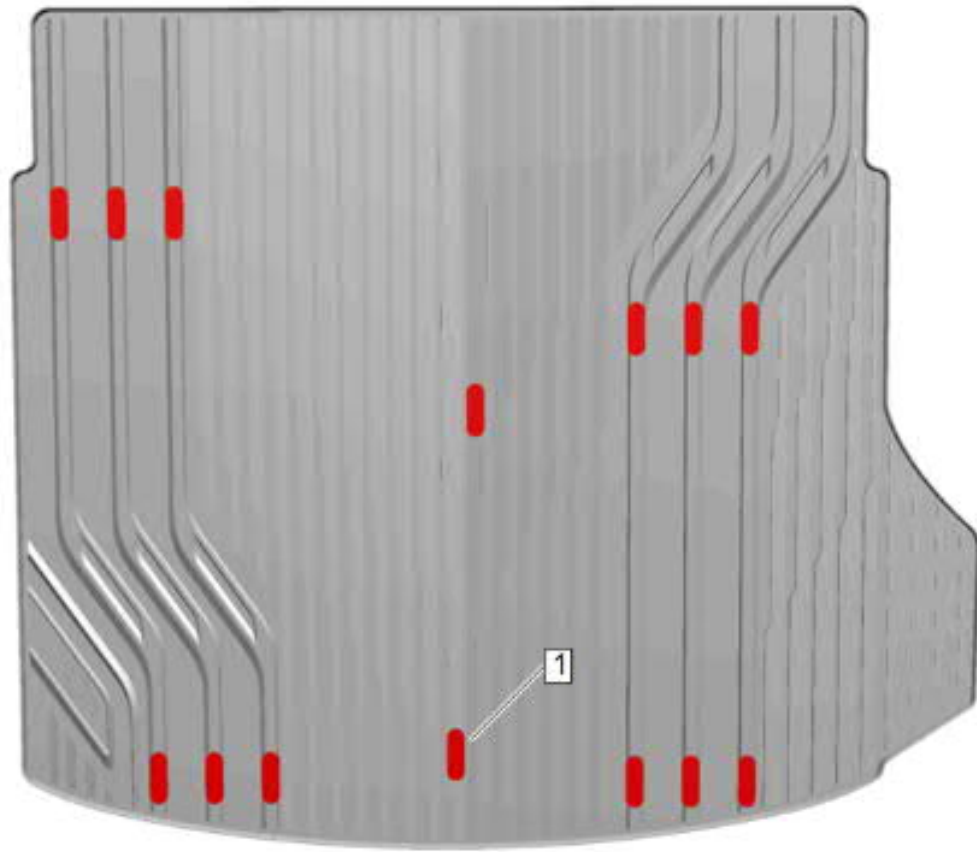

5. Load floor tray will have 14 adhesive adaptor pads (1) which will need to be pressurized or possibly rolled to ensure proper wet out.
6. Wait 15 minutes before adjusting/removing tray from vehicle to allow adhesive to cure.