

Rear Mud Guard Package Installation

Installation Instructions Part Number

86777806

Note: Please read instructions thoroughly before starting.

Rear Mud Guard Kit Contents

Qty	Description
1	Left Hand Splash Guard
1	Right Hand Splash Guard
1	Left Hand Splash Guard Bracket
1	Right Hand Splash Guard Bracket
6	M4.2 X 1.4 U-Nut
12	M4.2 X 1.4 Screw
8	Rivet
1	Instruction Sheet


© 2025 General Motors. All rights reserved.

Tools Required


- Rivet Gun
- T15 Screw Driver
- Drill
- 13/64" (5.0mm) Drill Bit
- Awl
- Clean Cloth/Rag

Installation Procedure


1. Remove the rear wheel and tire. Refer to [Tire and Wheel Removal and Installation](#) in Vehicle Service Manual.
2. Clean and degrease body panel where splash guards will be located.

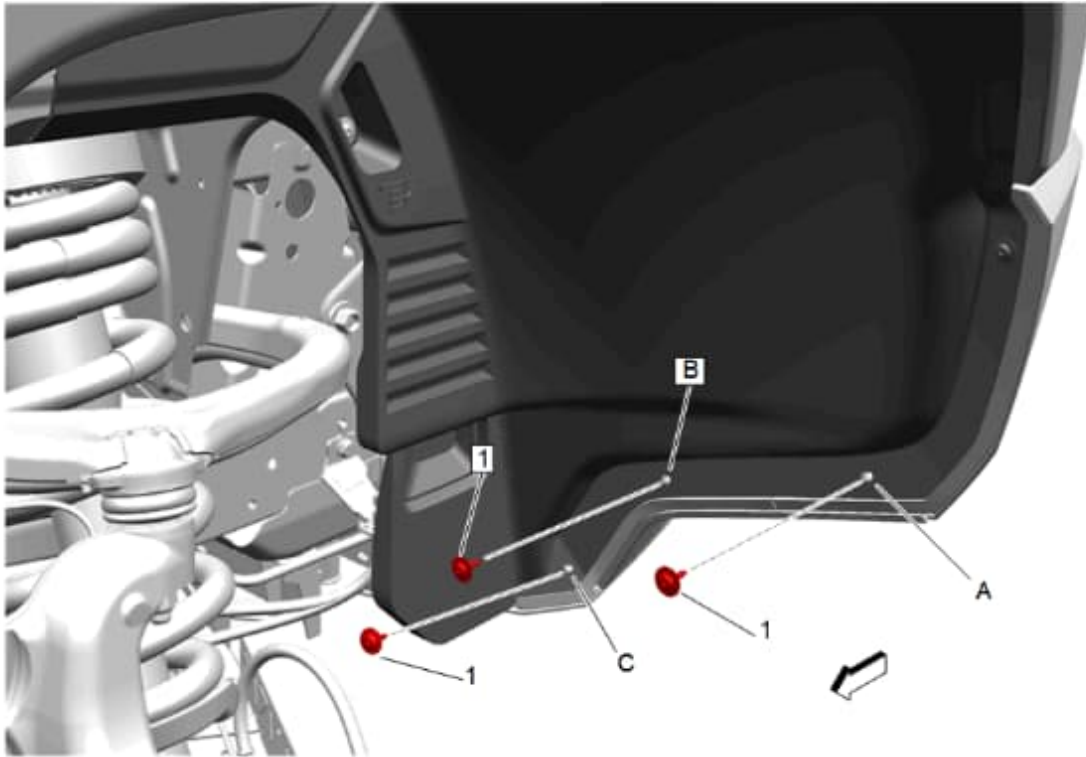

3. Remove existing screws (1) at locations (A), (B) and (C) and discard.

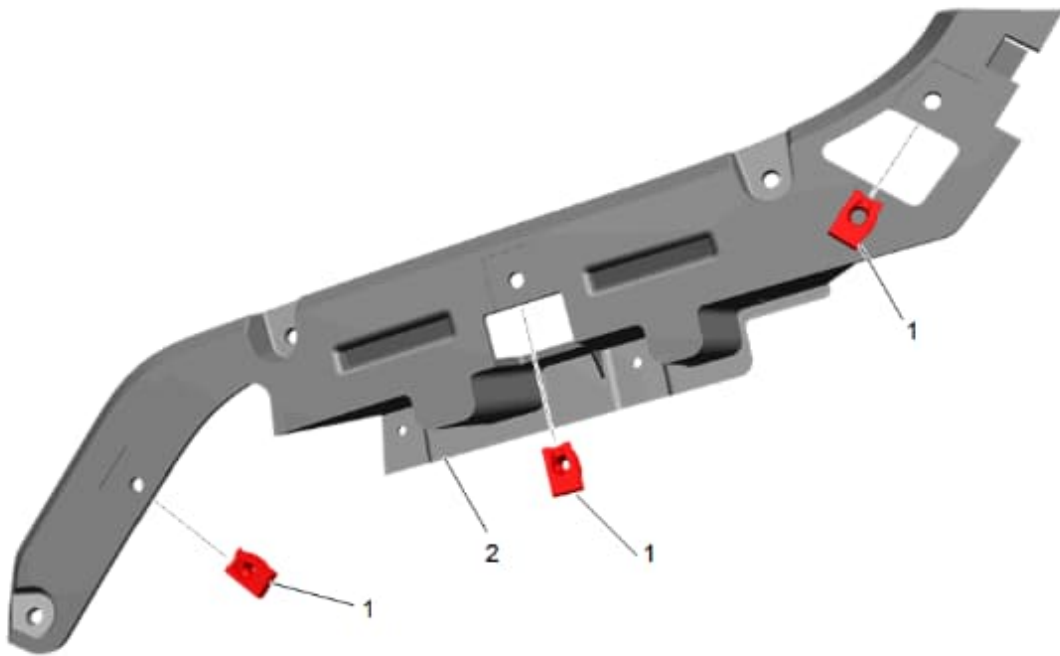


4. Place supplied U-nuts (1) onto supplied bracket (2).

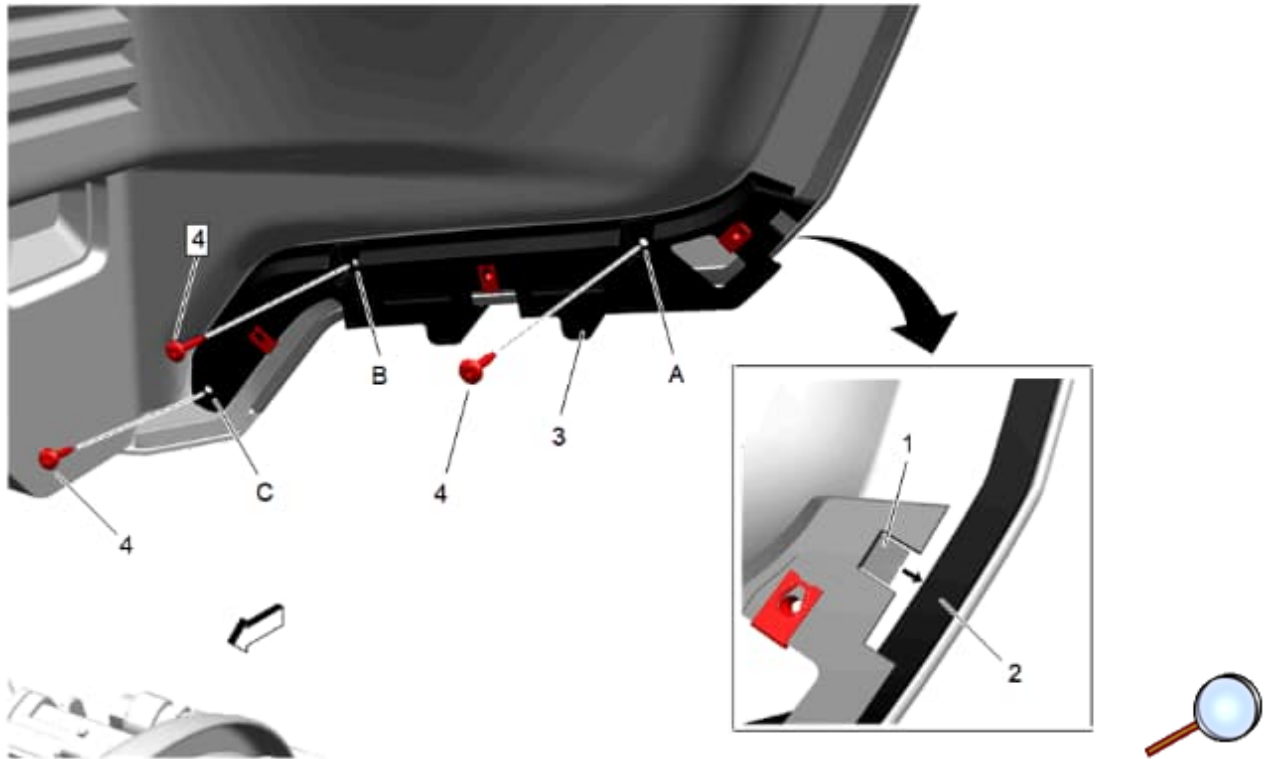

Caution: Use the correct fastener in the correct location. Replacement fasteners must be the correct part number for that application. Fasteners requiring replacement or fasteners requiring the use of thread locking compound or sealant are identified in the service procedure. Do not use paints, lubricants, or corrosion inhibitors on fasteners or fastener joint surfaces unless specified. These coatings affect fastener torque and joint clamping force and may damage the fastener. Use the correct tightening sequence and specifications when installing fasteners in order to avoid damage to parts and systems.


Note: Do not use power tools to install fasteners.

5. Ensuring the tab (1) is clipped into the rear fascia flange (2), place the bracket (3) to the vehicle and install supplied screws (4) at locations (A), (B) and (C). Tighten the screws to 3.0 N.m (27 lb in).

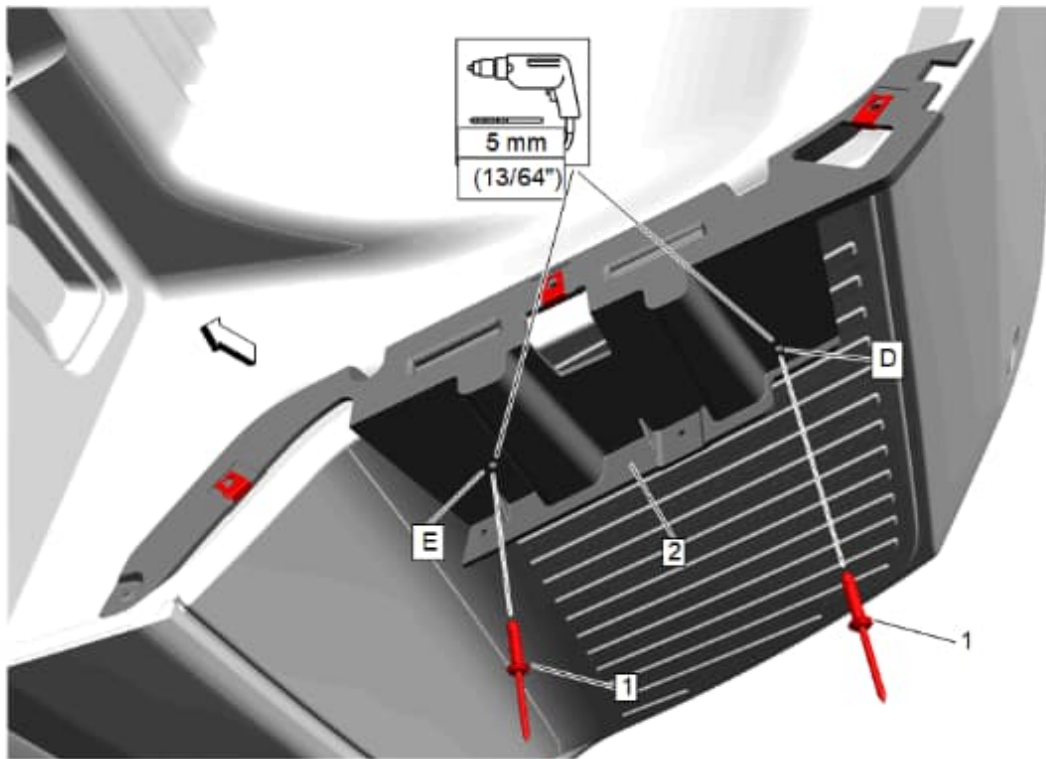


Caution: Always check position of splash guard bracket before drilling. Failing to do so may cause damage to the vehicle, misalignment of components or the inability to install the accessory.

- Using the holes on bracket at locations (D) and (E) as pilots, drill a 13/64" (5.0mm) hole through the bracket (2) and vehicle panel and install supplied rivets (1) at these locations.

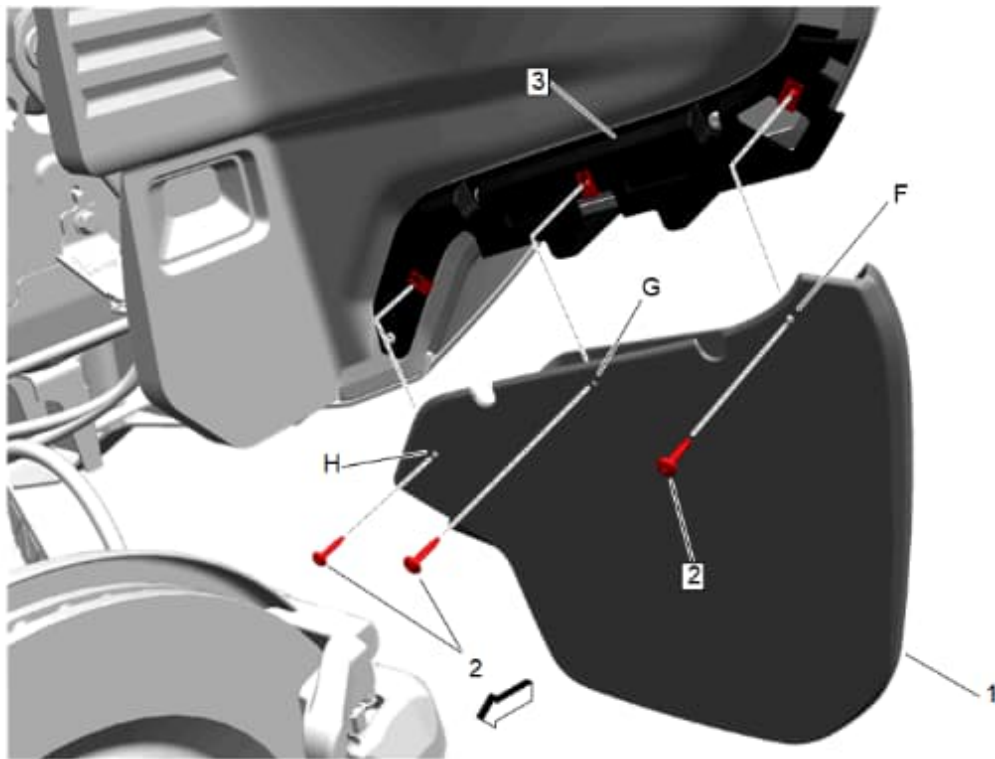

- Place splash guard (1) to bracket (3) making sure splash guard completely covers bracket and install supplied screws (2) to locations (F), (G) and (H). Tighten the screws to 3.0 N.m (27 lb in).

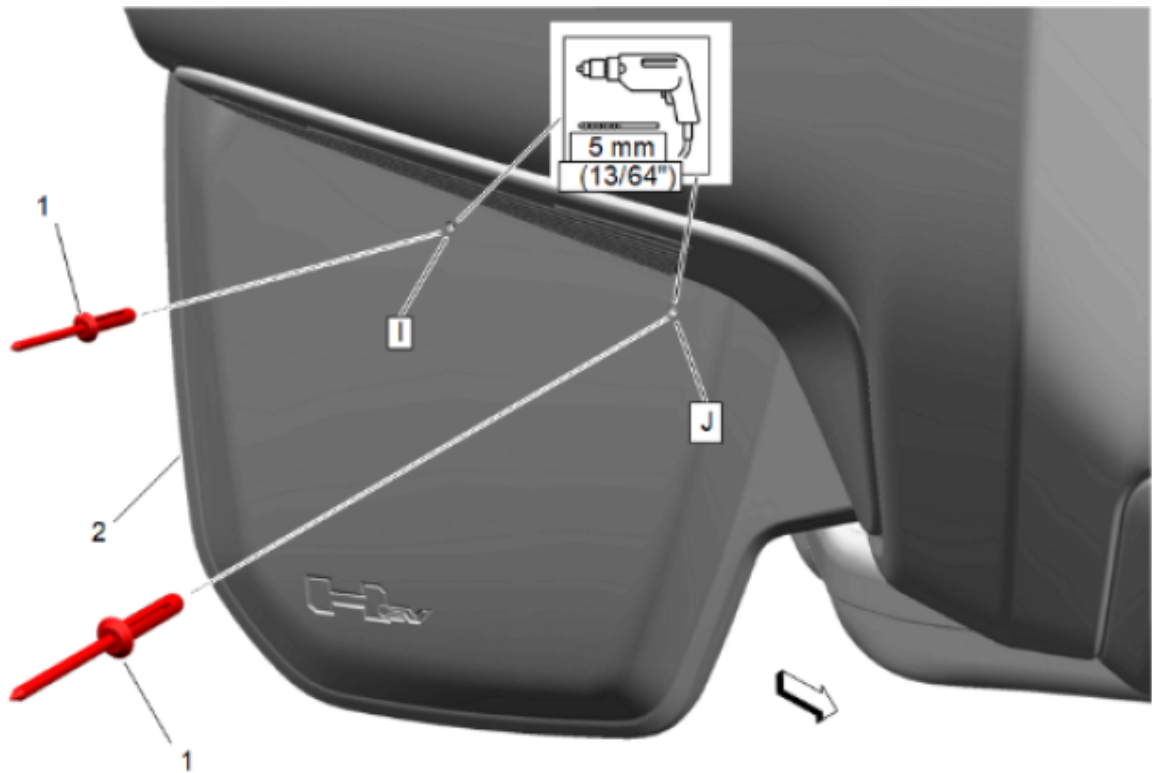

8. Make sure the splash guard is tight to the vehicle. Using an AWL align splash guard (2) and bracket holes at locations (I) and (J). Drill a 13/64" (5.0mm) hole at locations (I) and (J). Drill into the splash guard pilot holes and through the bracket and install supplied rivets (1) at these locations.
9. Re-install the rear wheel and tire. Refer to [Tire and Wheel Removal and Installation](#) in Vehicle Service Manual.
10. Repeat for other side.
11. Guards can be cleaned with any commercially available cleaner.