


## Floor Auxiliary Mat Set Installation (Instruction ID: 87850868)

### Installation Instructions Part Number


87850868

### Front And Rear Floor Liners

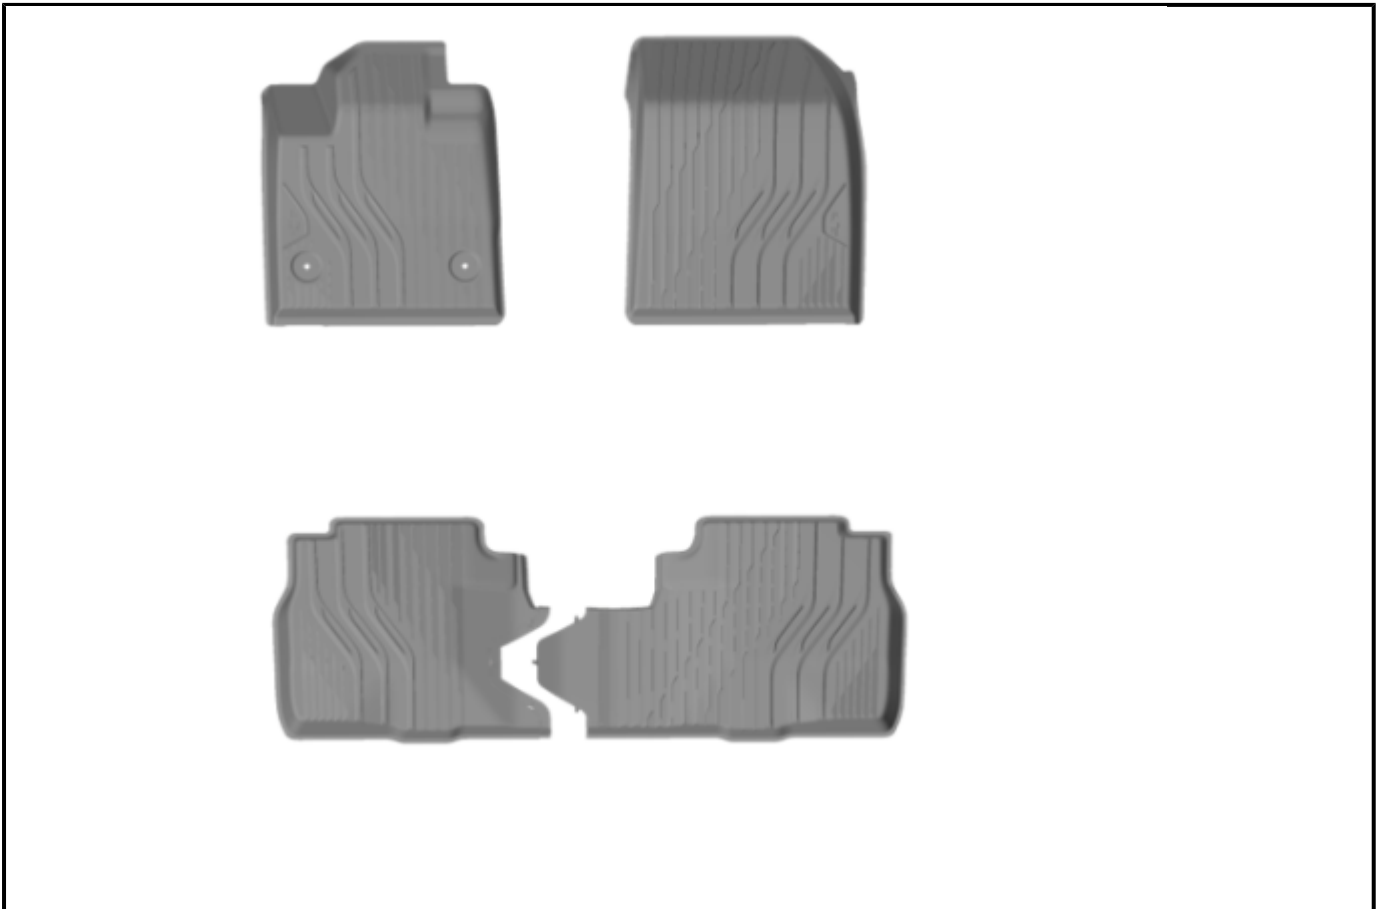


6379311


### Front and Rear Floor Liners Procedure

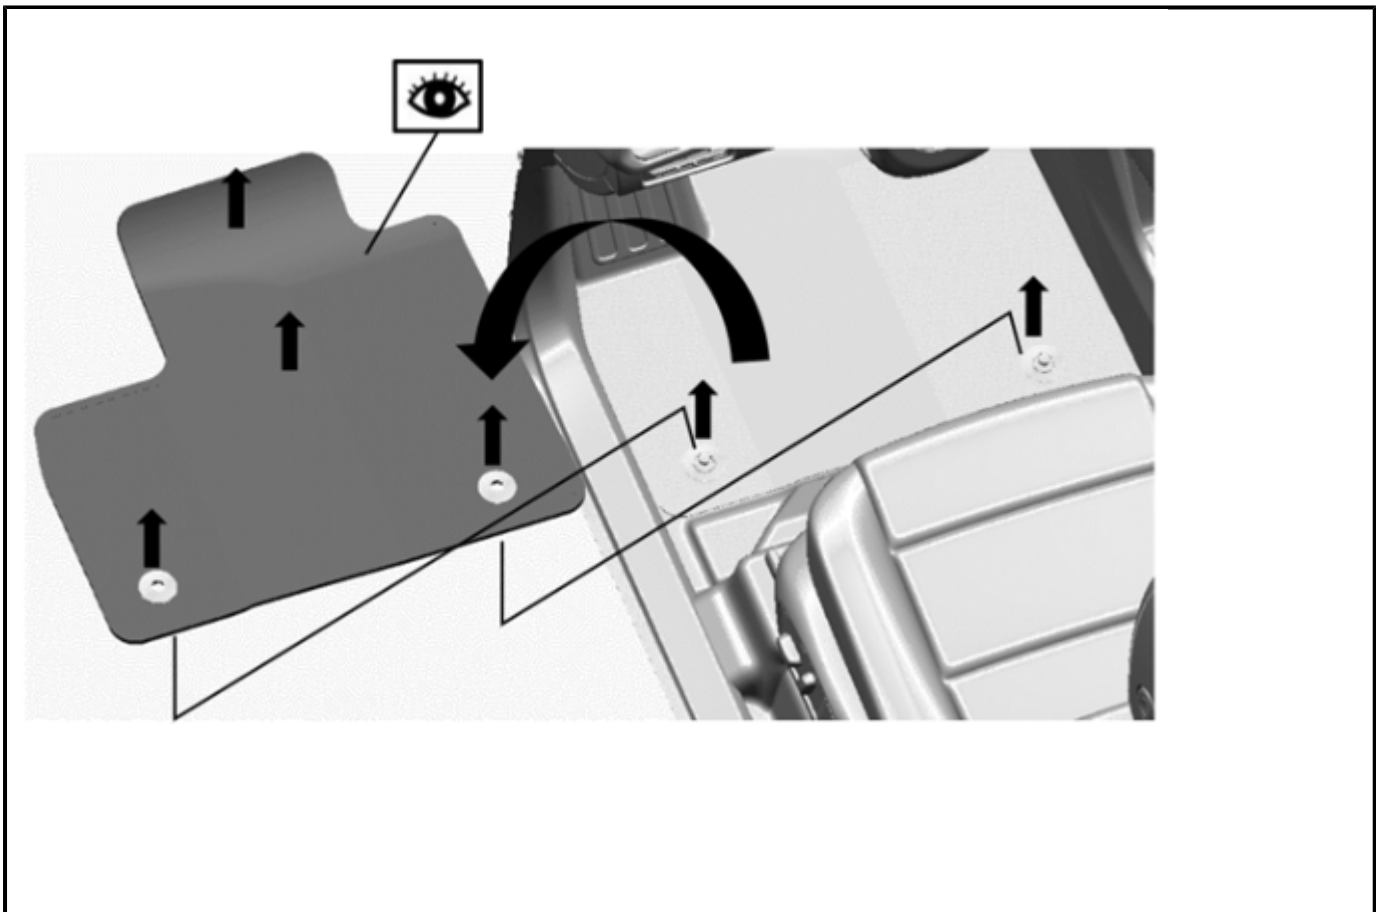


6372777

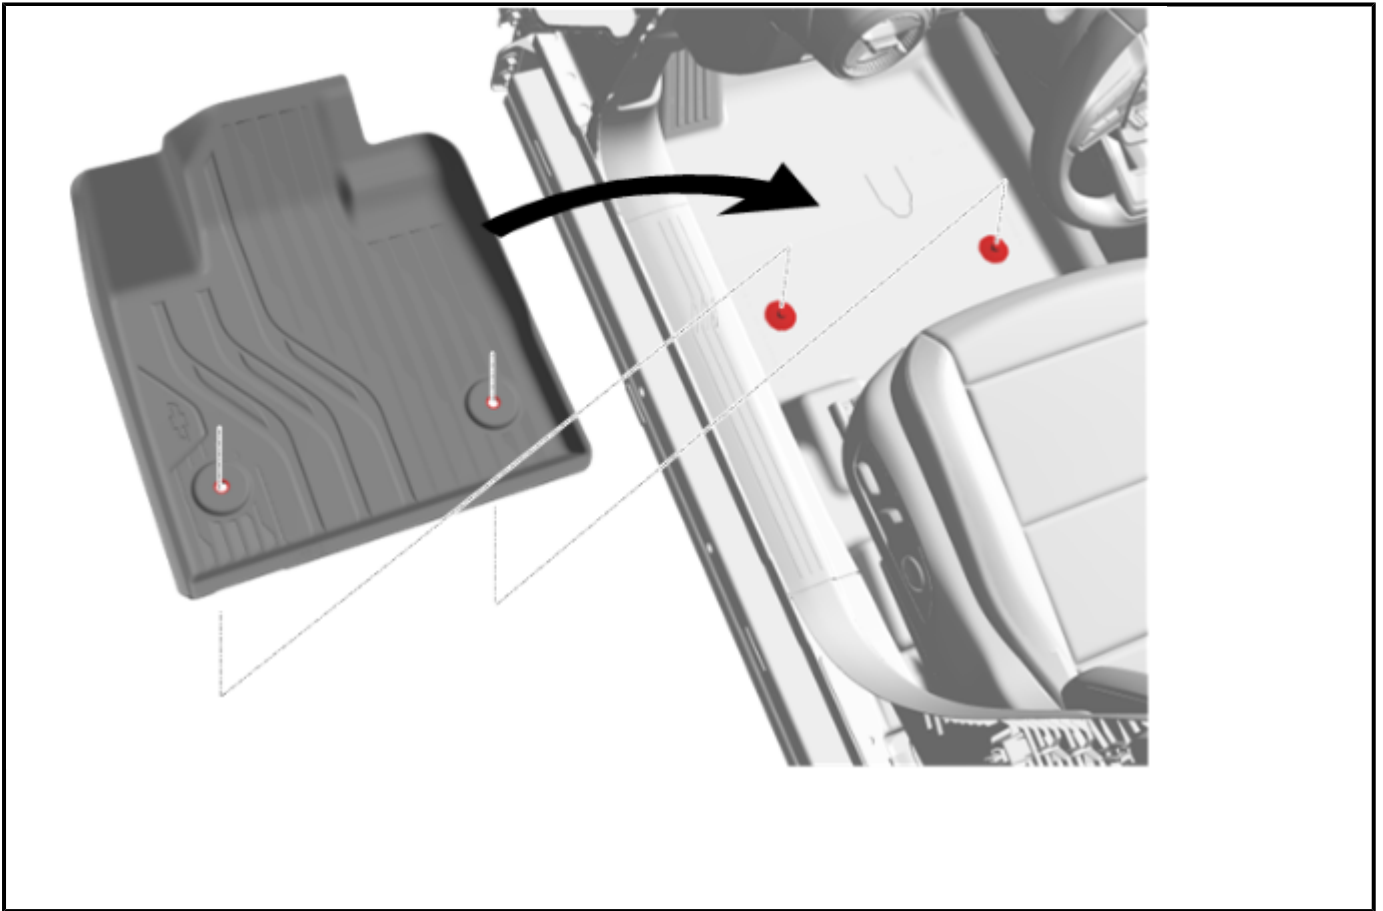


6379315

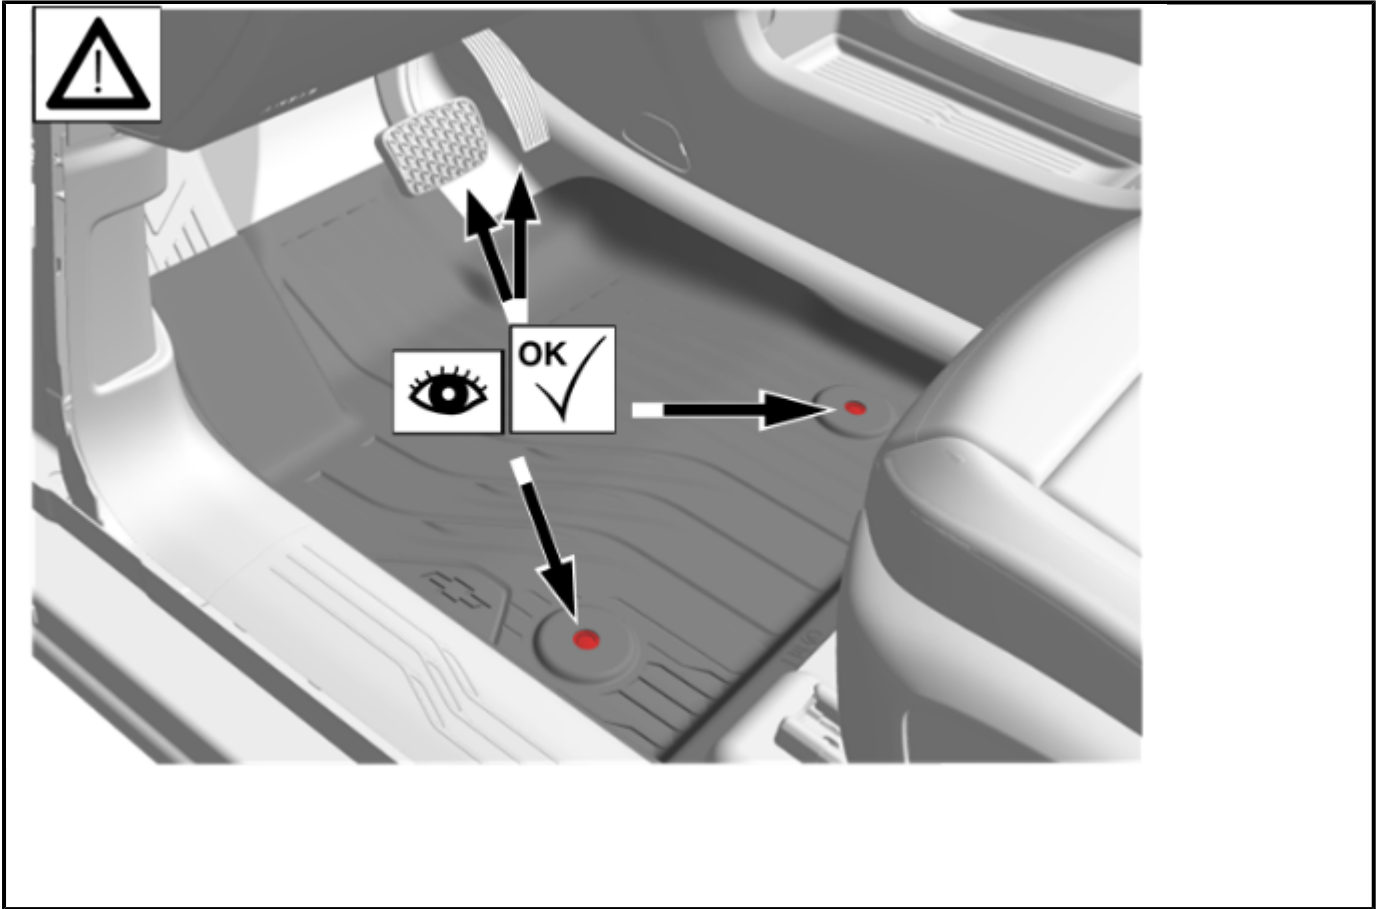


6379316

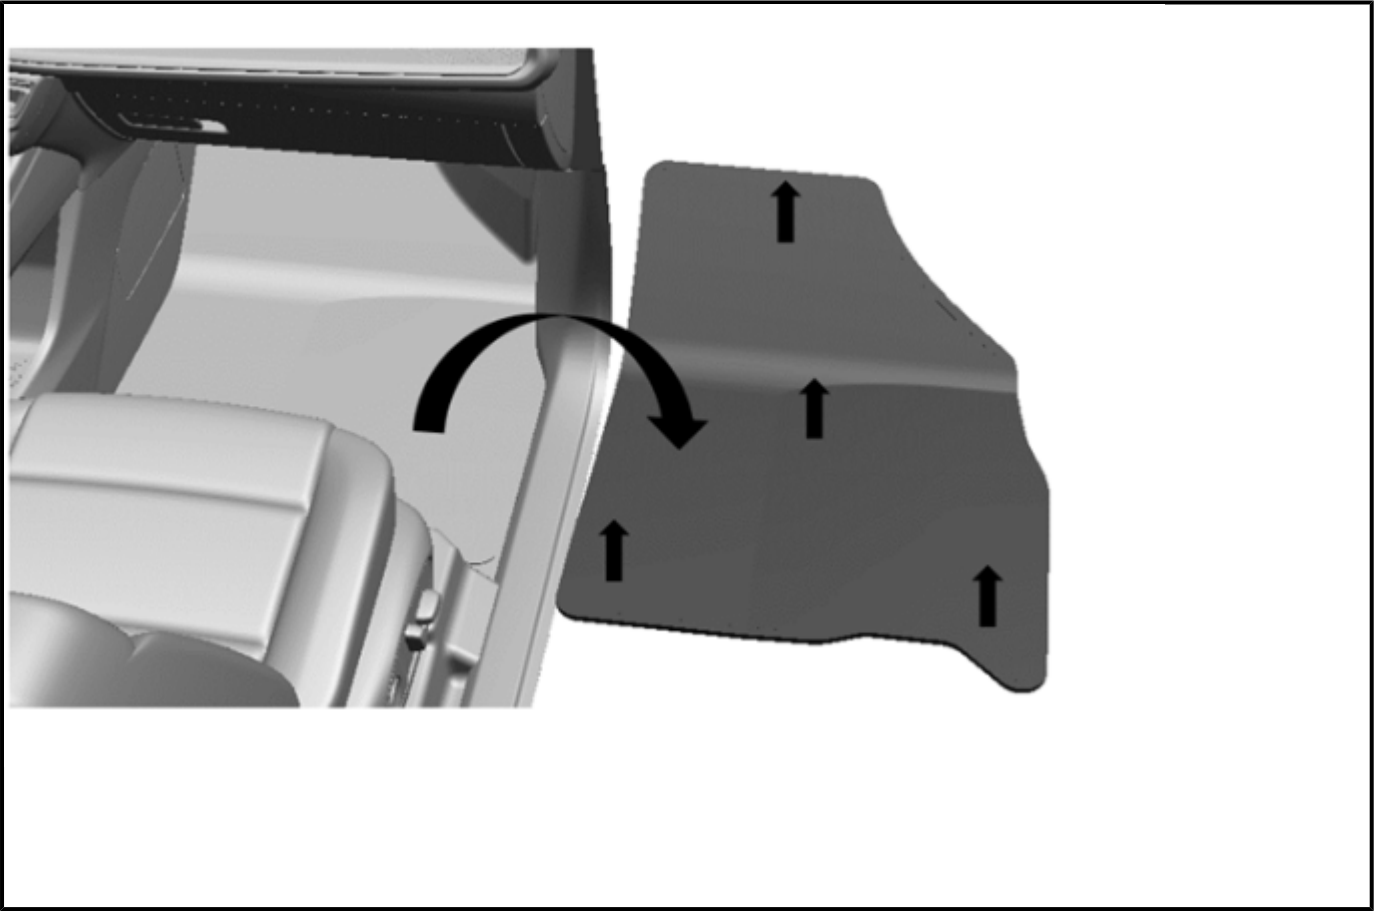

6372782

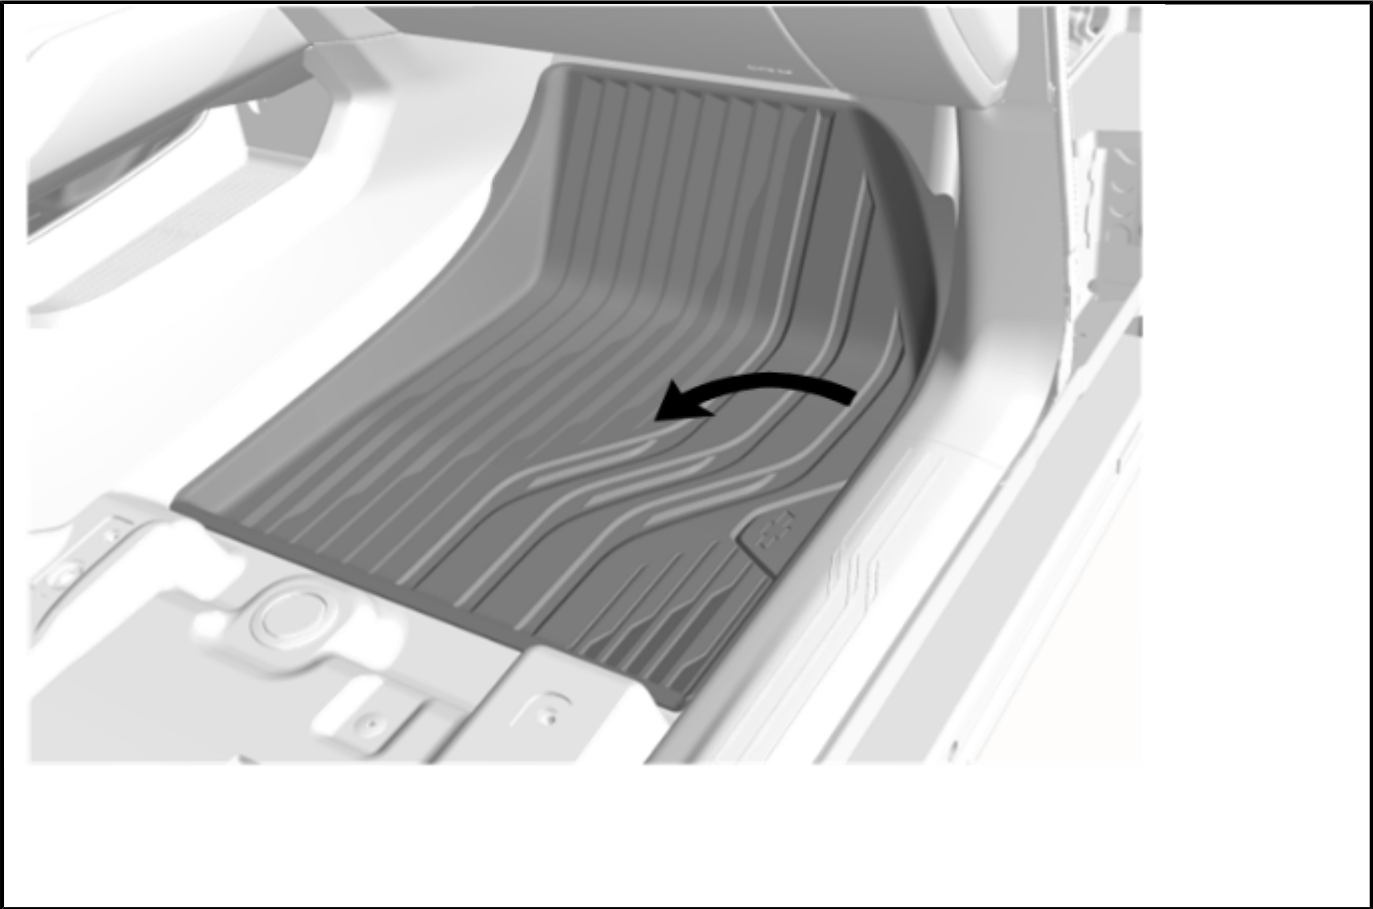

6379318

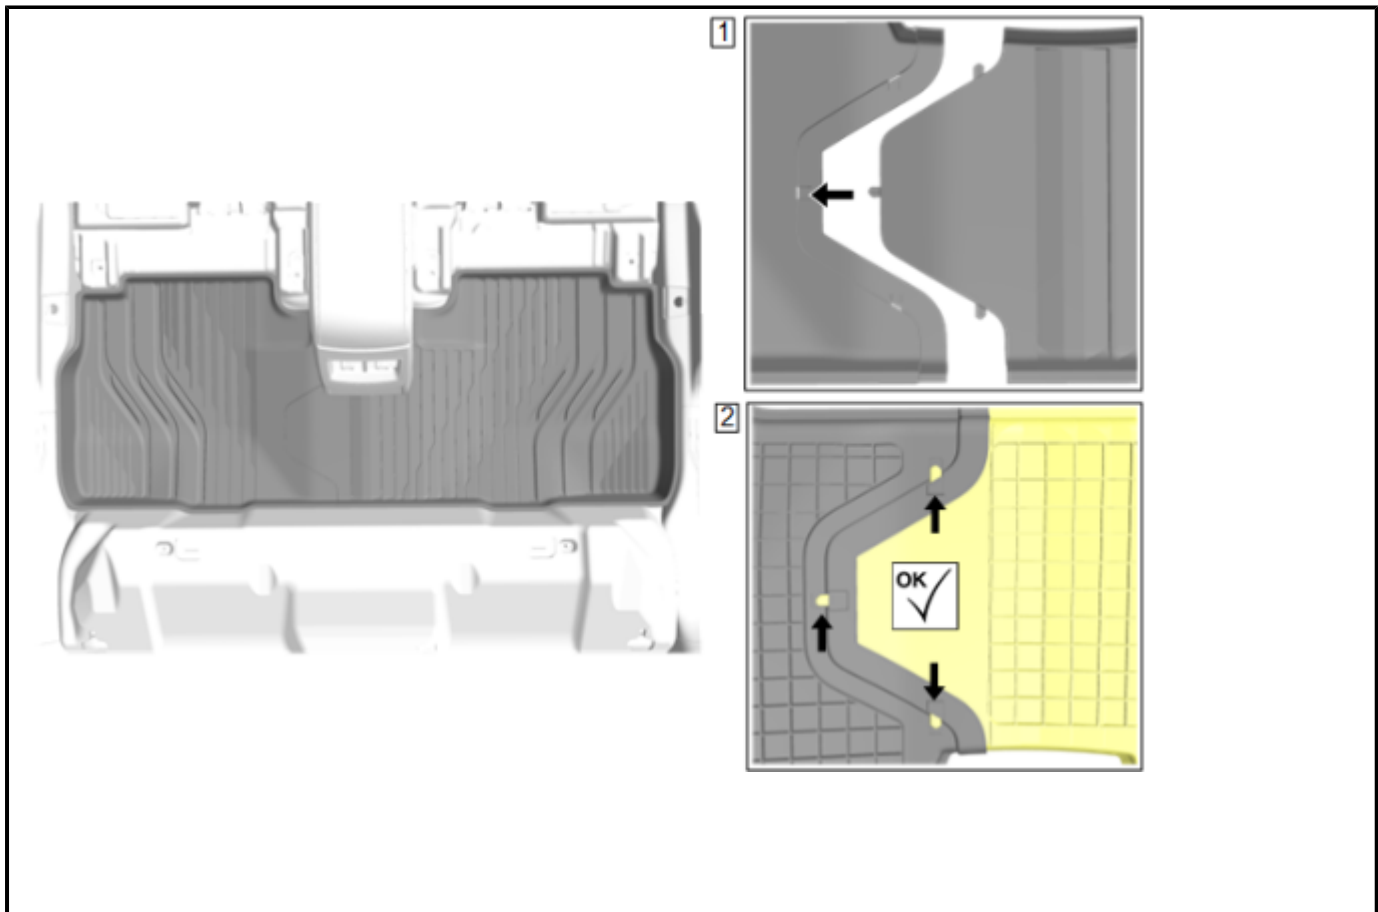

6379320