

**Document ID: 4324964**

# Rear End Trim Finish Panel Package Installation

## Installation Instructions Part Number


23412933

### Kit Contents

| Qty | Description                            |
|-----|--|
| 1   | Illuminated Rear End Trim Finish Panel |
| 1   | Striker Cover                          |
| 1   | Installation Instructions              |


### Procedure

1. Open the rear liftgate.
2. Remove cargo load floor cover. Refer to [Load Floor Trim Panel Replacement](#).
3. Remove left and right floor panel track. Refer to [Cargo Partition Track Replacement](#).
4. Remove the left and right foam block from rear compartment.
5. Remove the rear end trim panel. Refer to [Rear End Trim Finish Panel Replacement](#).
6. Remove the right rear lower quarter trim panel. Refer to [Quarter Lower Rear Trim Panel Replacement](#).
7. Disconnect the electrical connector from the right rear cargo lamp located above the right rear wheel well.

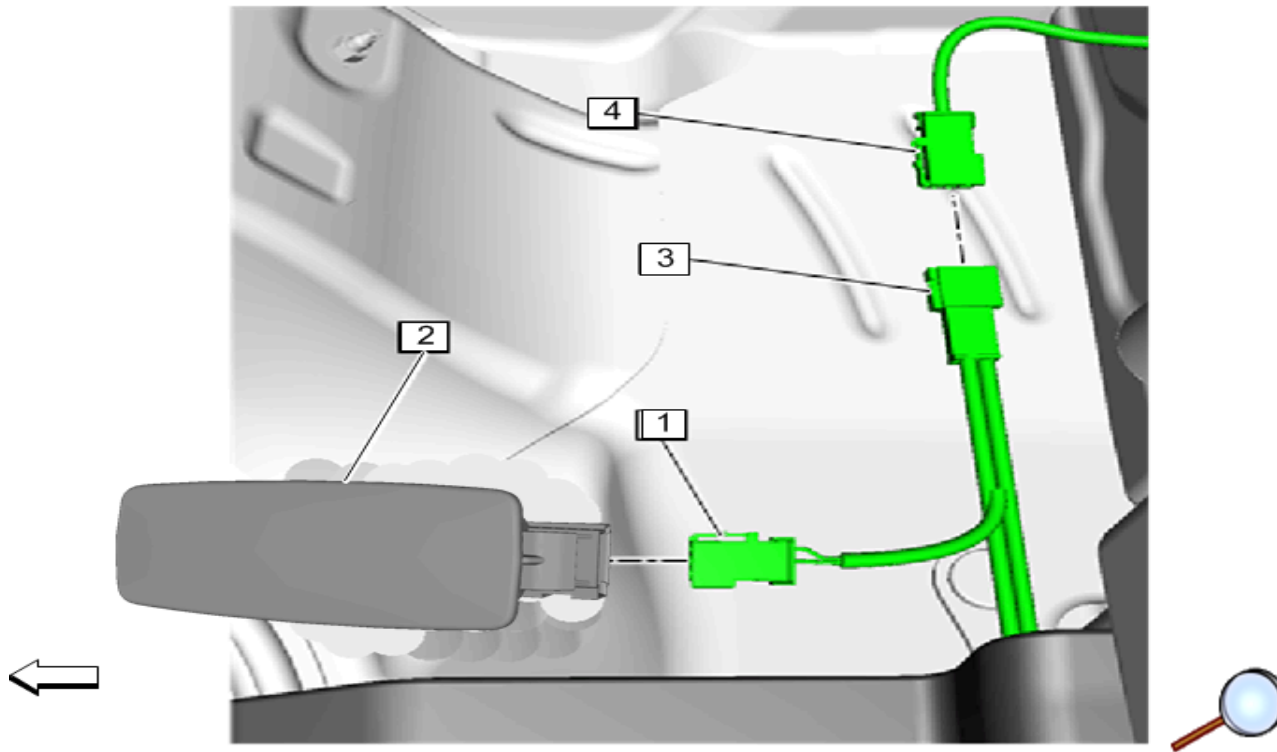

**Note:** This harness will "T" into the cargo lamp wiring power and rear illuminated trim panel.

8. Position the new illuminated rear end trim panel inside the vehicle and connect the previously removed male electrical connector (4) from the rear compartment lamp and connect to the Illuminated rear end trim finish panel female connector (3).
9. Connect the Illuminated rear end trim finish panel connector (1) to the rear compartment lamp (2).

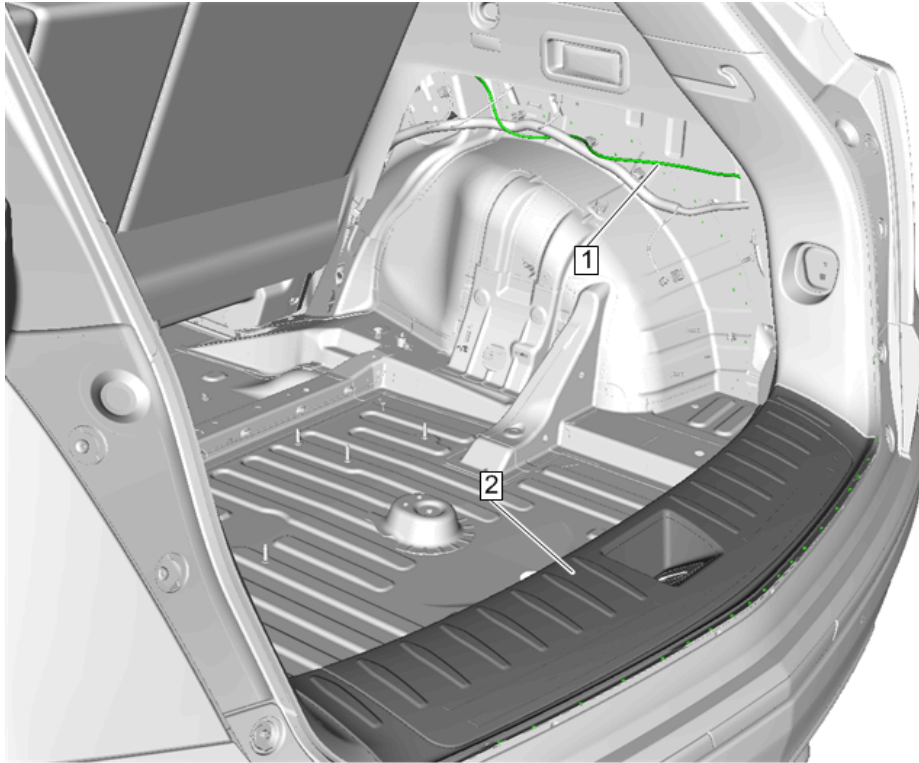

10. Route the rear illuminated rear end trim panel wiring (1) above the rear wheel house and towards the rear end of vehicle.

**Note:** Use tape if needed to secure the wiring into place.

**Note:** The wiring needs to end up at the bottom rear corner of the right rear quarter trim.

11. Install the right rear lower quarter trim panel. Refer to [Quarter Lower Rear Trim Panel Replacement](#).

12. Install the Illuminated rear end trim finish panel (2) to the rear compartment sill by engaging the integral retaining clips and nuts.

13. Install the new striker cover.

14. Install the left and right foam block to rear compartment.

15. Install the left and right floor panel track. Refer to [Cargo Partition Track Replacement](#).

16. Install cargo load floor cover. Refer to [Load Floor Trim Panel Replacement](#).